



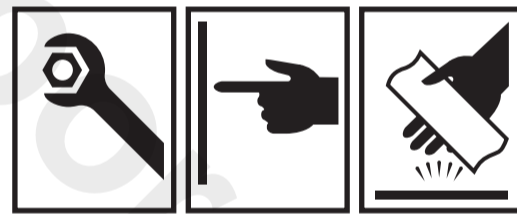

Spare Parts / Ersatzteile / Pièces de recharge / Pezzi di Ricambio / Piezas de requesto /
 Parte de reposição / Reserveonderdelen / Reservdelar / Reservedeler / Varaosat /
 Vraosat / Varahlutir / Ανταλλακτικά / Yedek Parçalar / Náhradní díly / Náhradné diely /
 Nadomestni deli / Резервни части / Запчасти / Części Zapasowe / Piese de schimb
 / Rendelhető alkatrészek / Запасні частини / Reservni delovi / Резервни делови /
 Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezervju daļi



Position

- 2 = A 960 152 NU (4x)
- 3 = A 960 148 NU
- 4 = A 960 150 NU
- 5 = A 960 151 NU
- 7a = A 960 155 NU (2x)
- 10 = A 960 158 NU
- 11 = A 960 161 NU
- 12 = A 960 162 NU
- 13 = A 960 163 NU
- 15 = A 963 544 NU (4x)

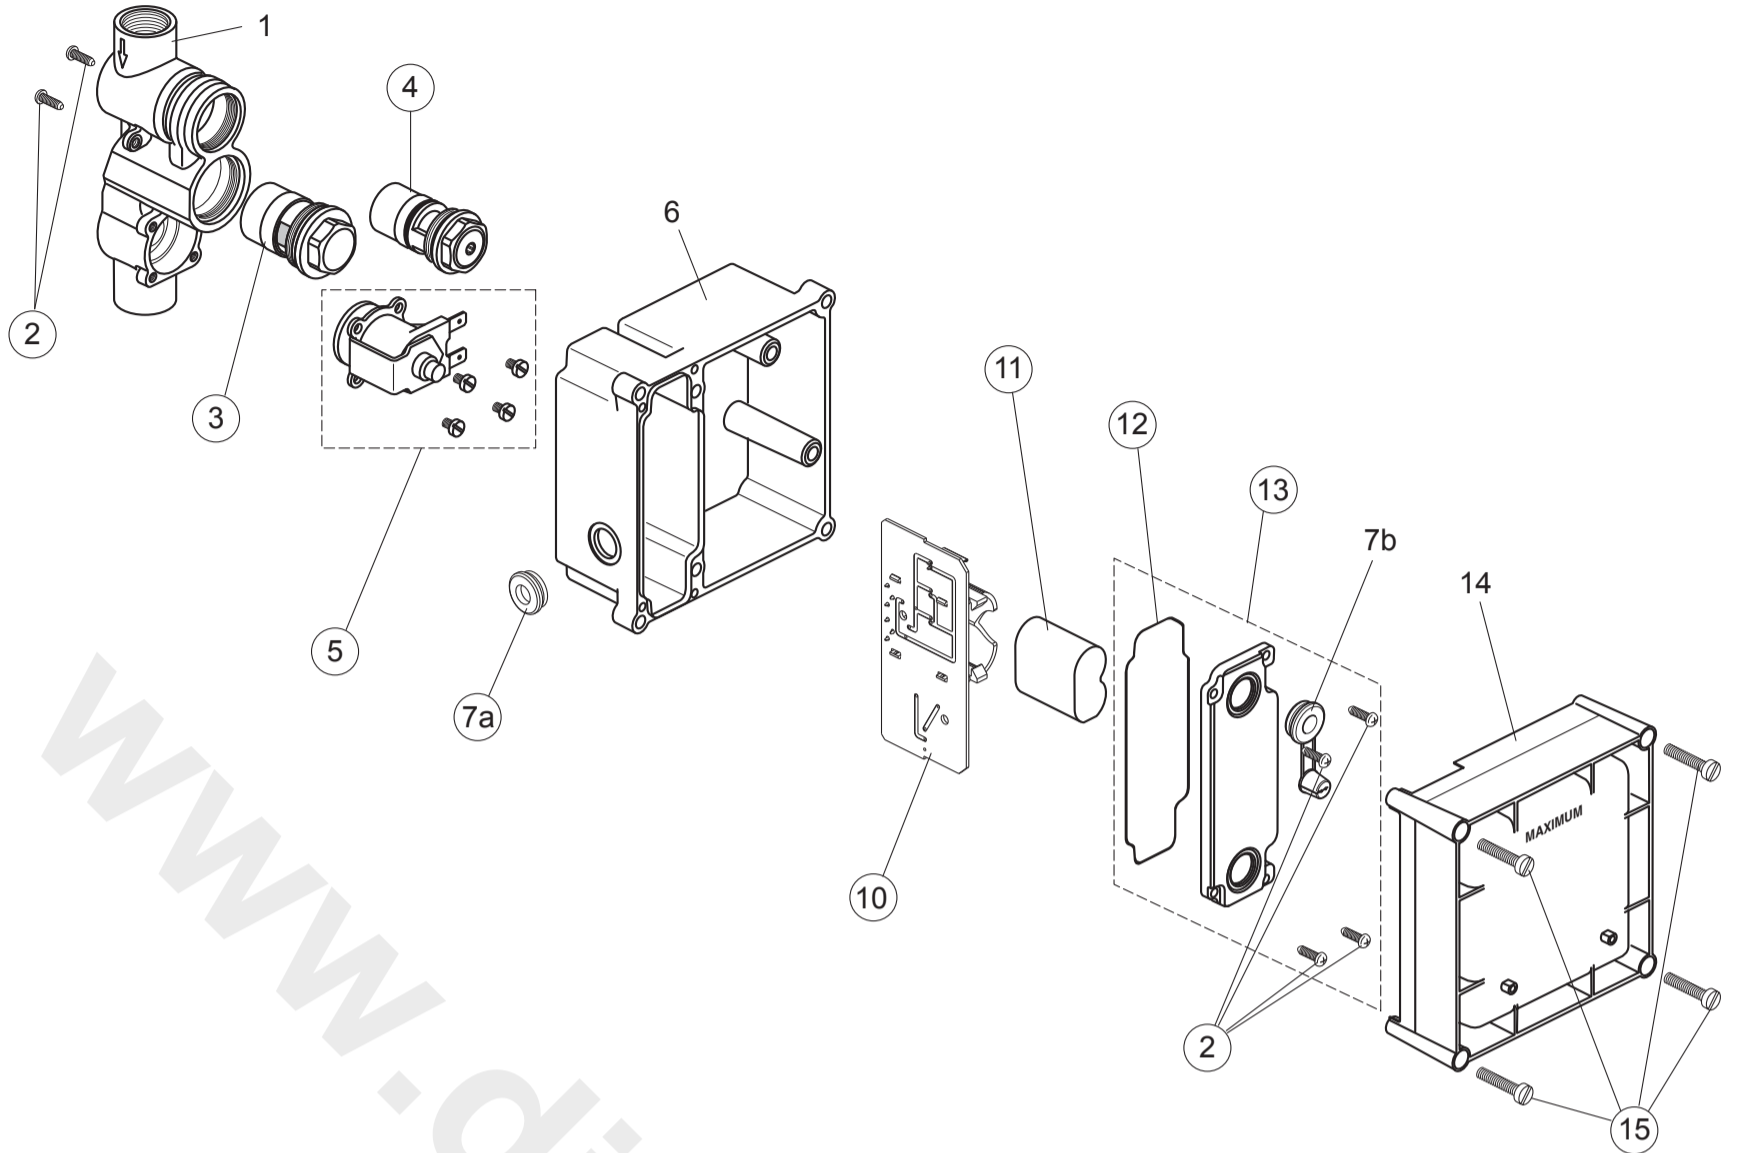


PROXIMITY
A 3794 NU

0216 / A 865 308
 (+ A 865 612)
 Made in Germany

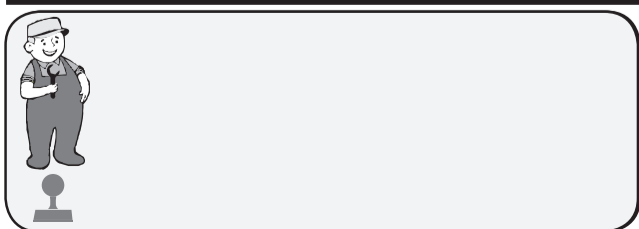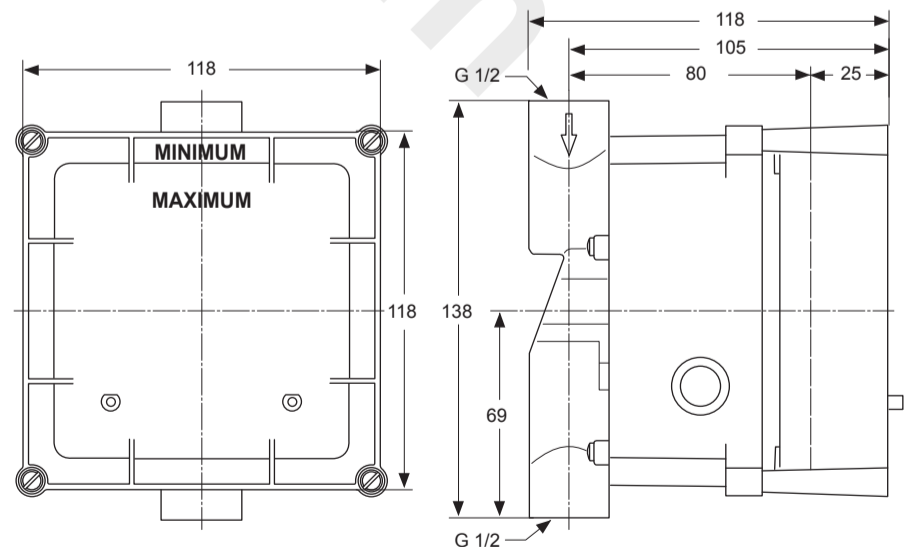


Ideal Standard International NV
 Corporate Village - Gent Building
 Da Vincilaan 2
 1935 Zaventem
 Belgium

www.idealstandardinternational.com

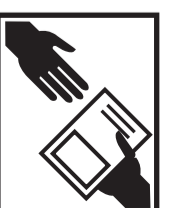





1 max / min

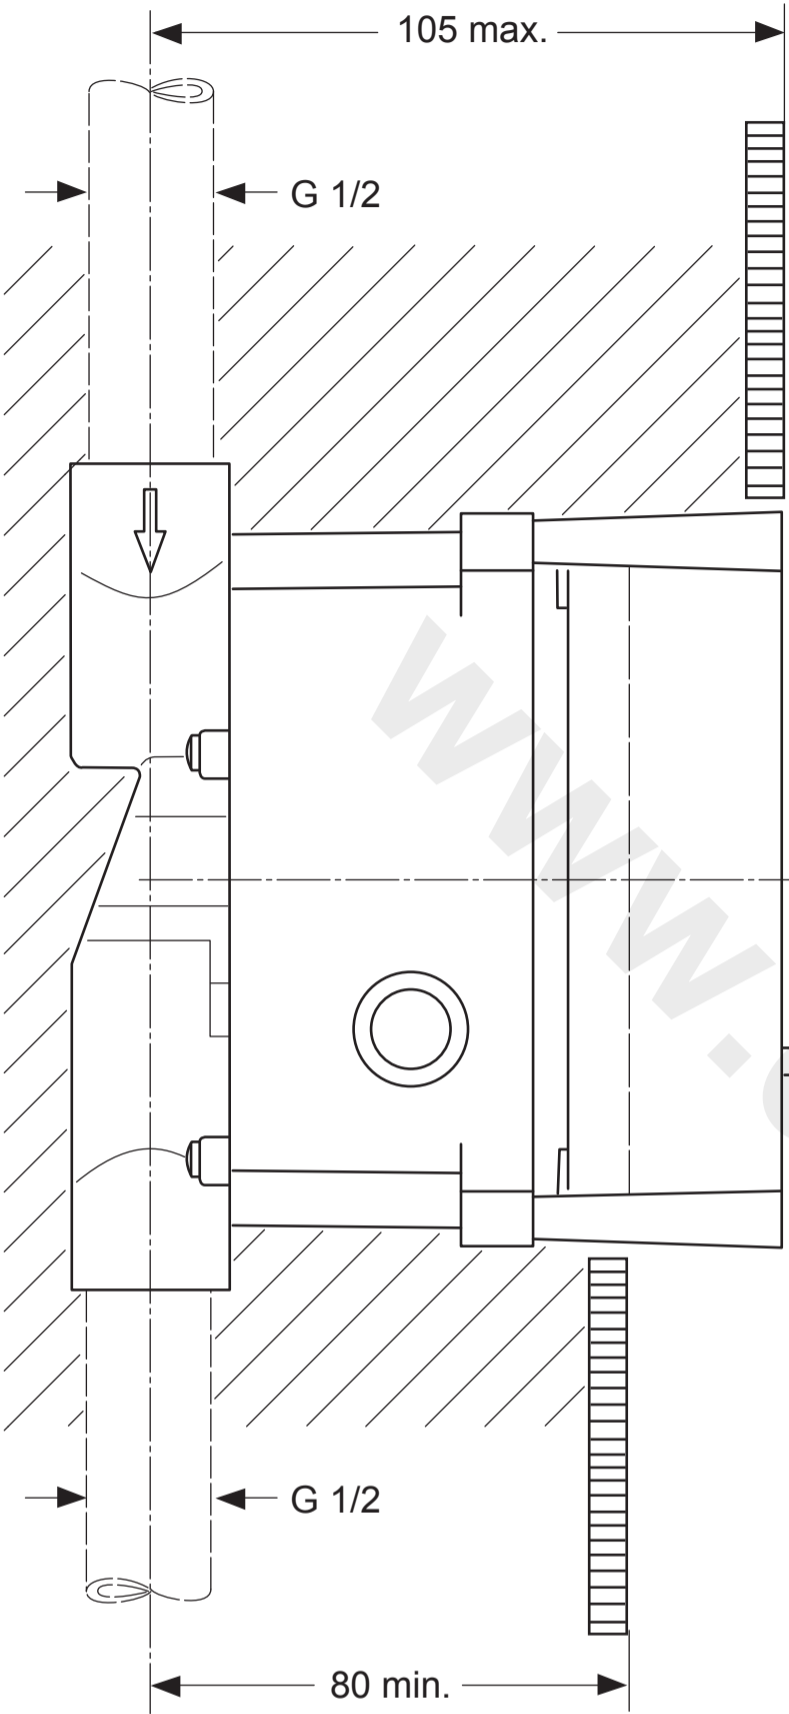

2

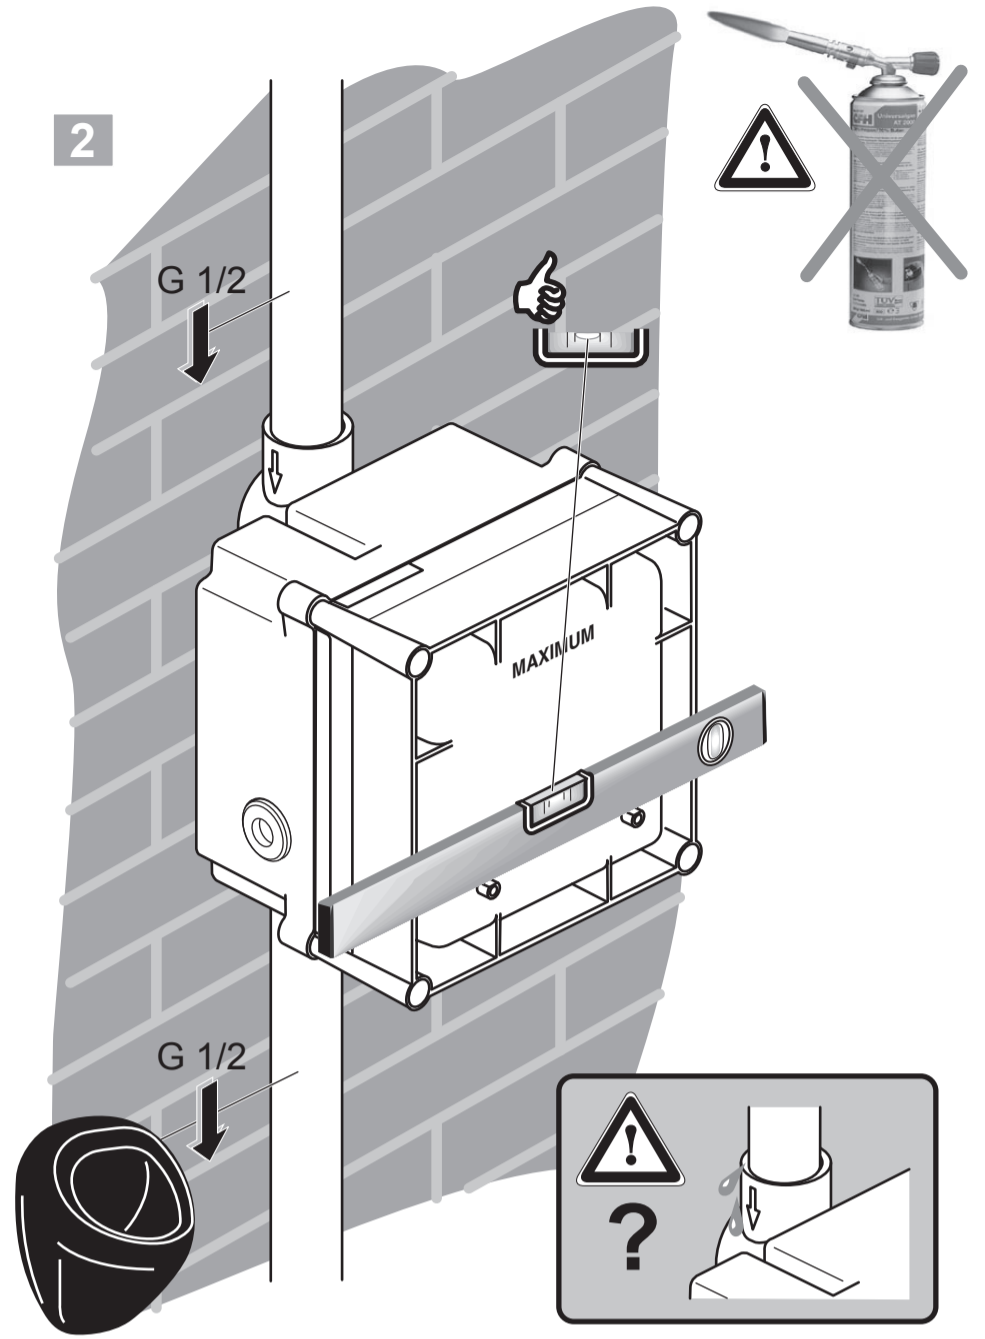

3

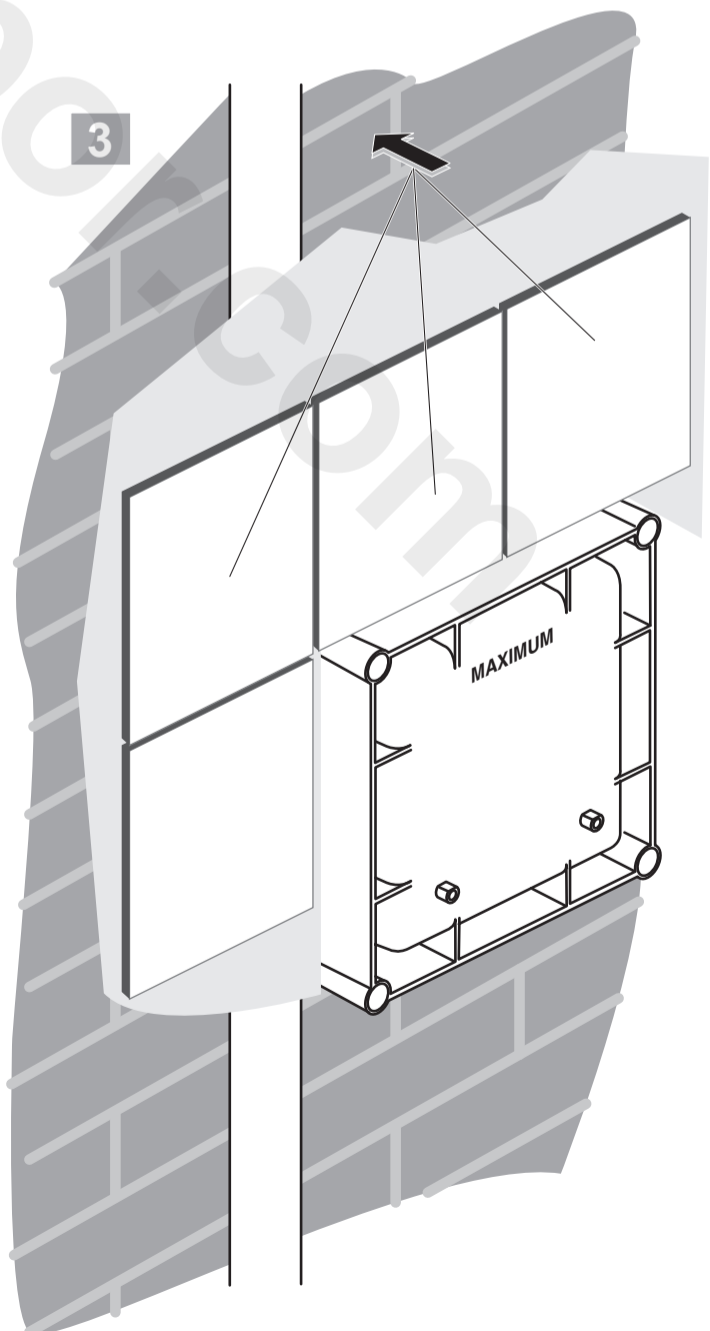

Batterie erst bei Inbetriebnahme einsetzen.
 Battery only with start-up use.
 Batterie seulement avec l'utilisation de mise en train.
 Inserire la batteria quando introito nell'impresa.

Batterie:
 Battery:
 Pile:
 Batteria: 6V Lithium CR/P2

	P	bar				Q (3 bar)
	T	°C				l/min
						30