


Milano

Overflow Bath Filler


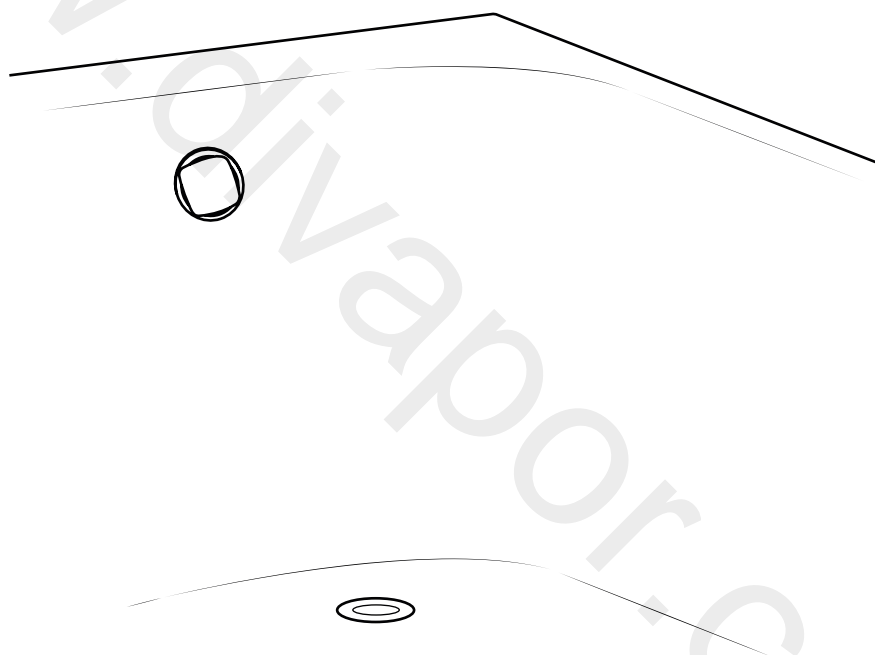


ⓘ Style may vary

Installation Guide


Installation

Tools required for installing:

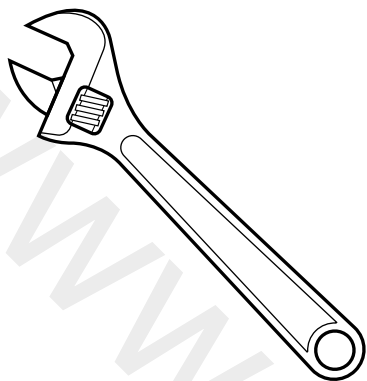


www.divapor.com


Parts included:

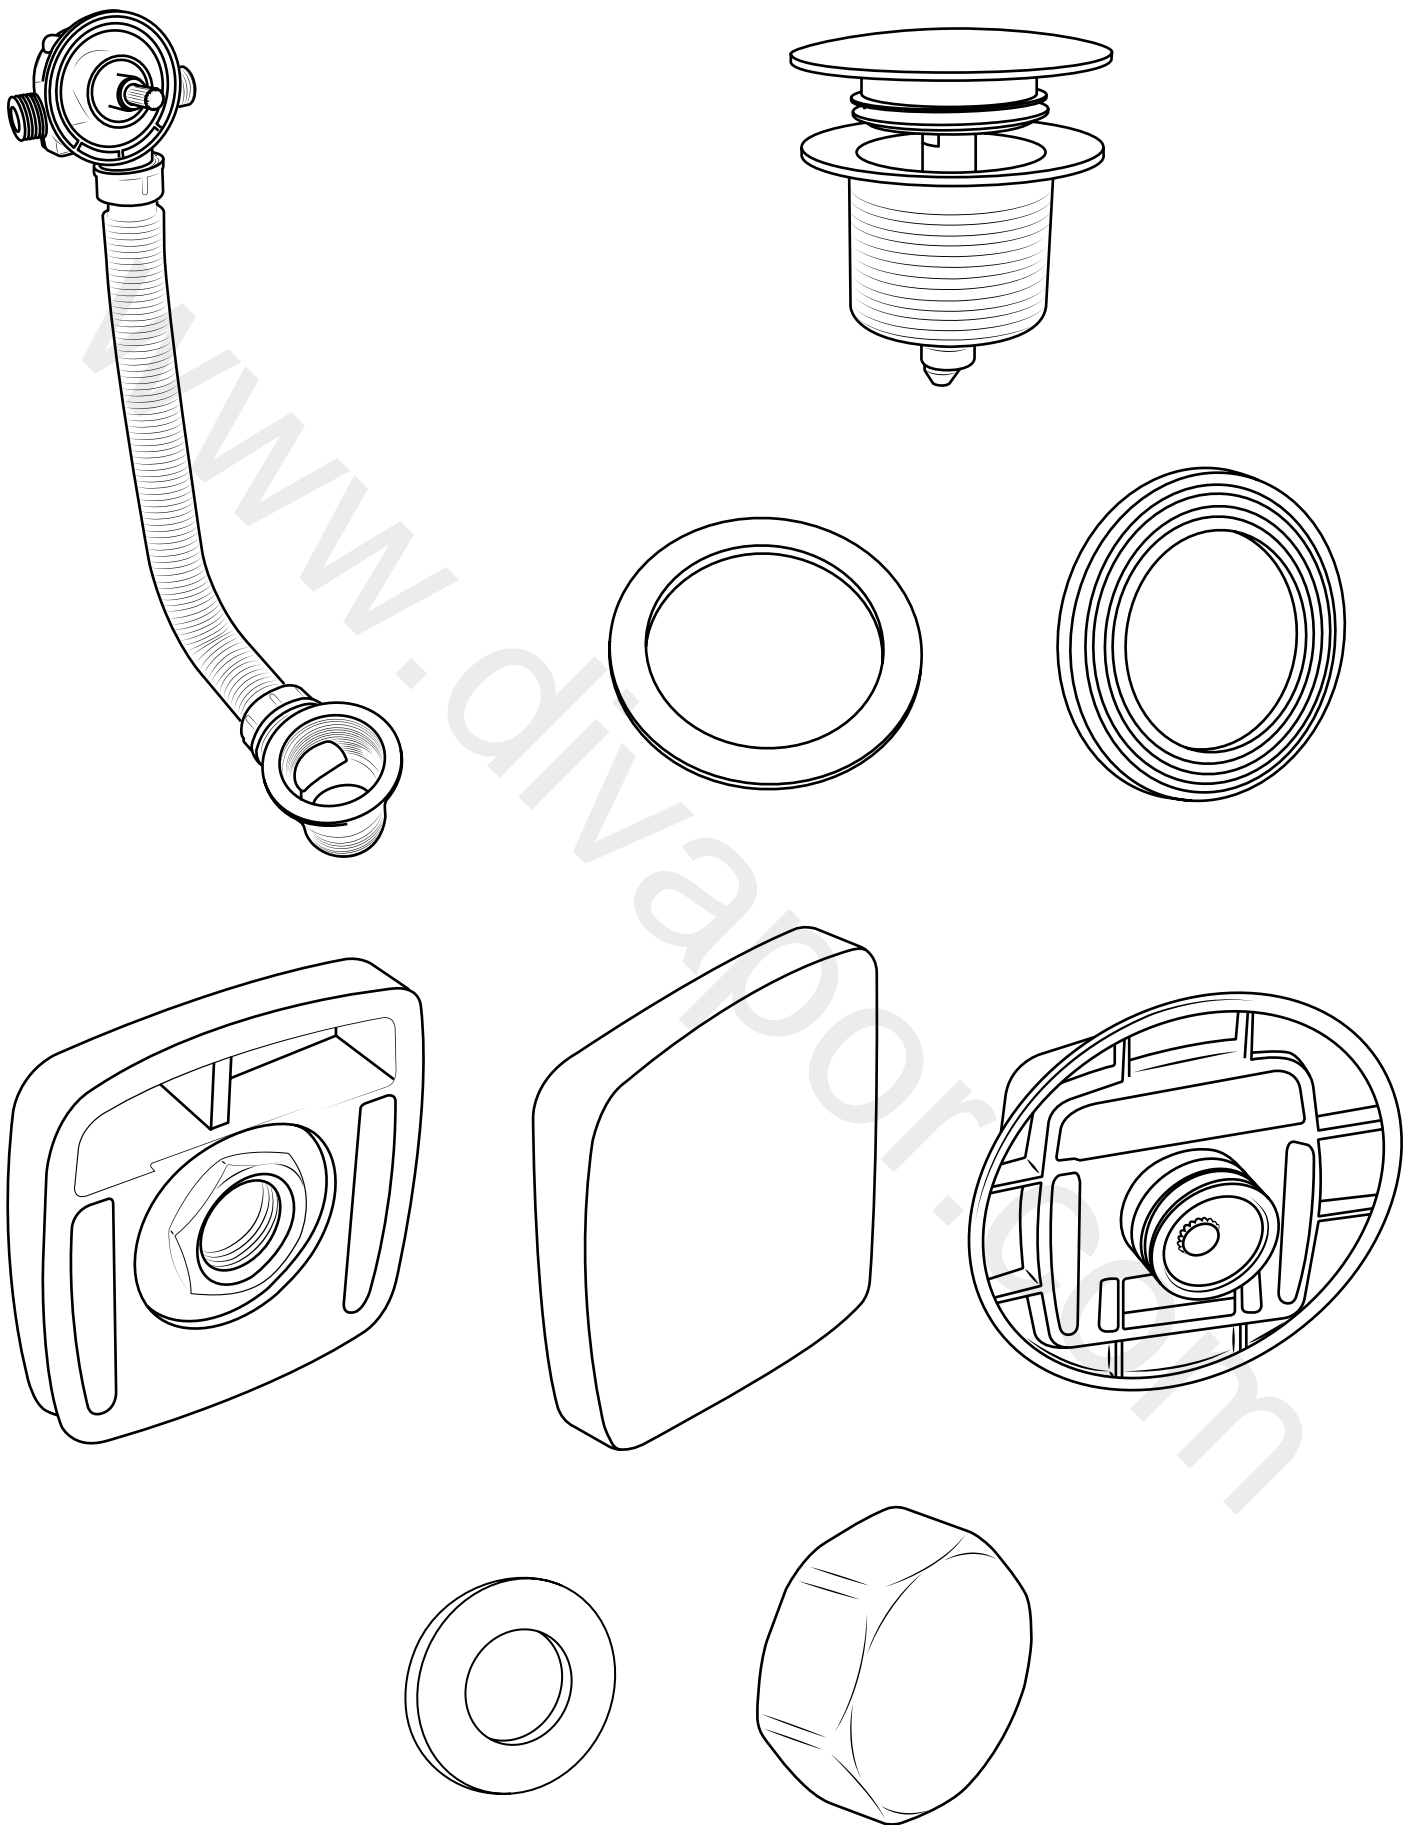


1

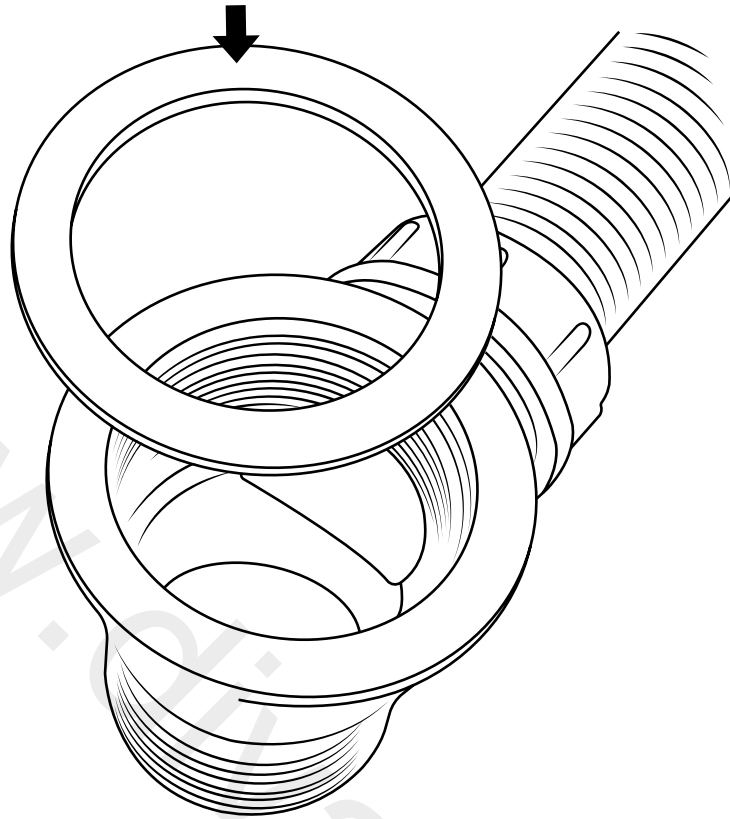


2

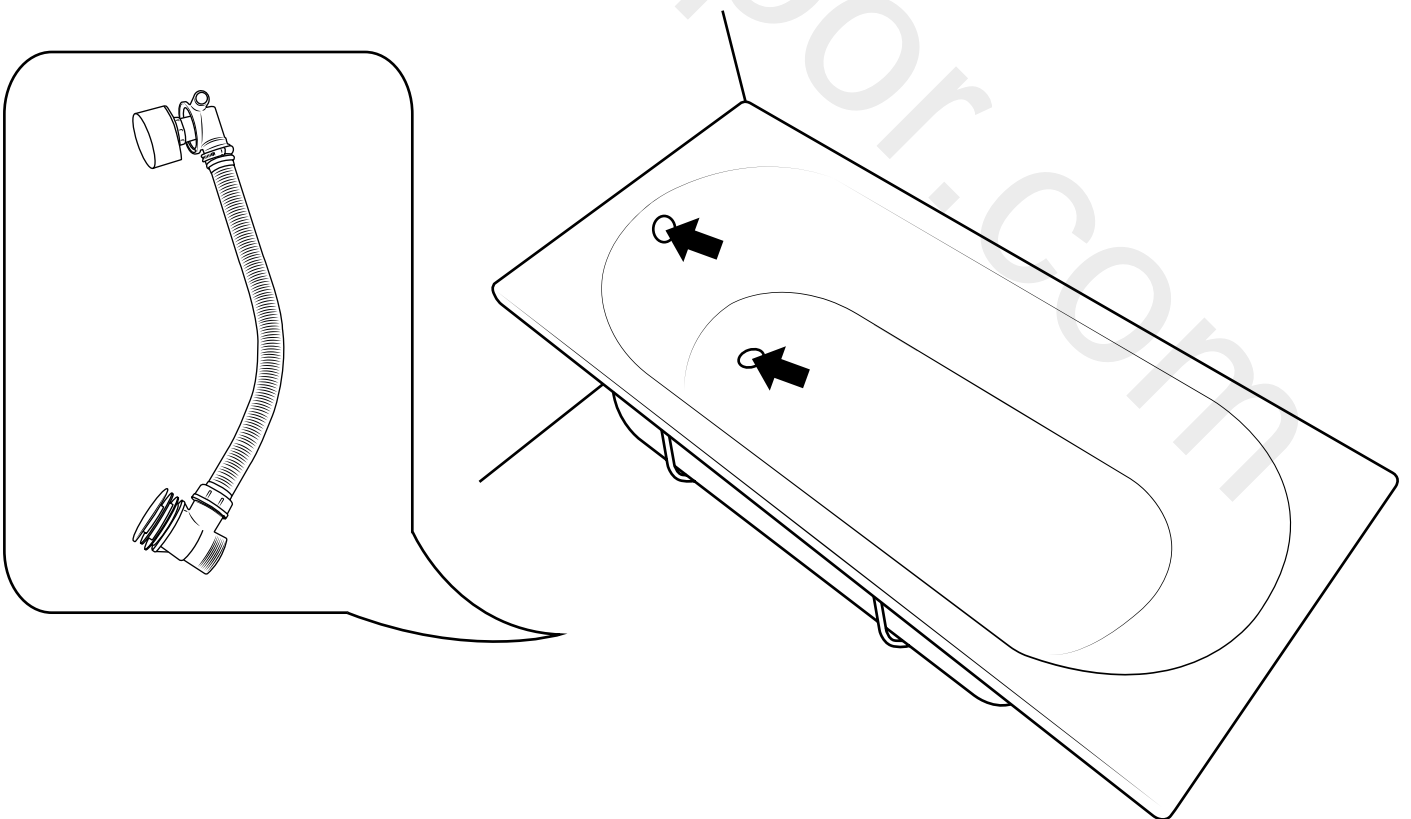




3

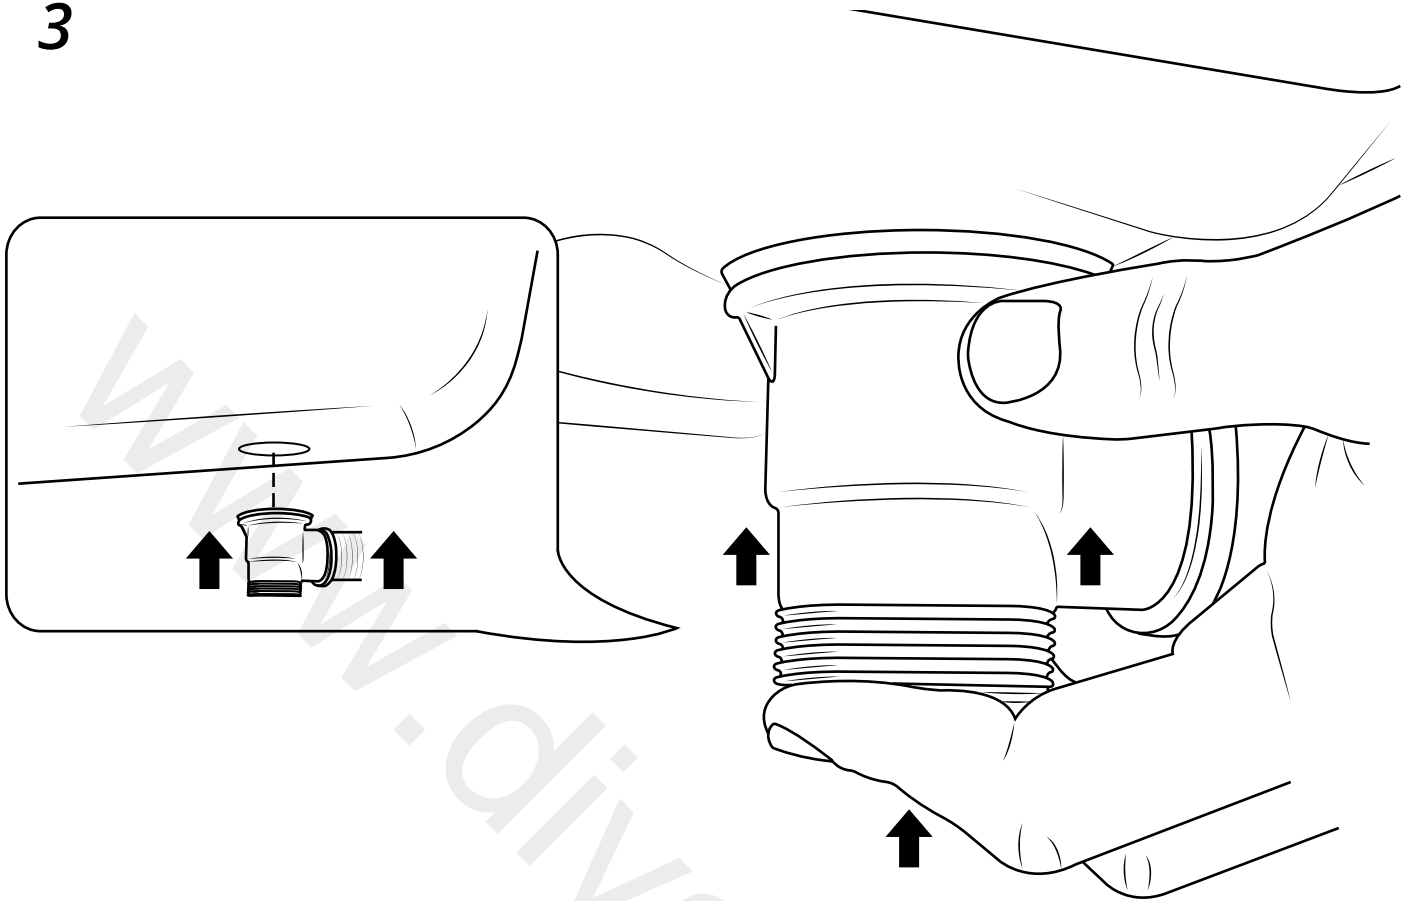



4

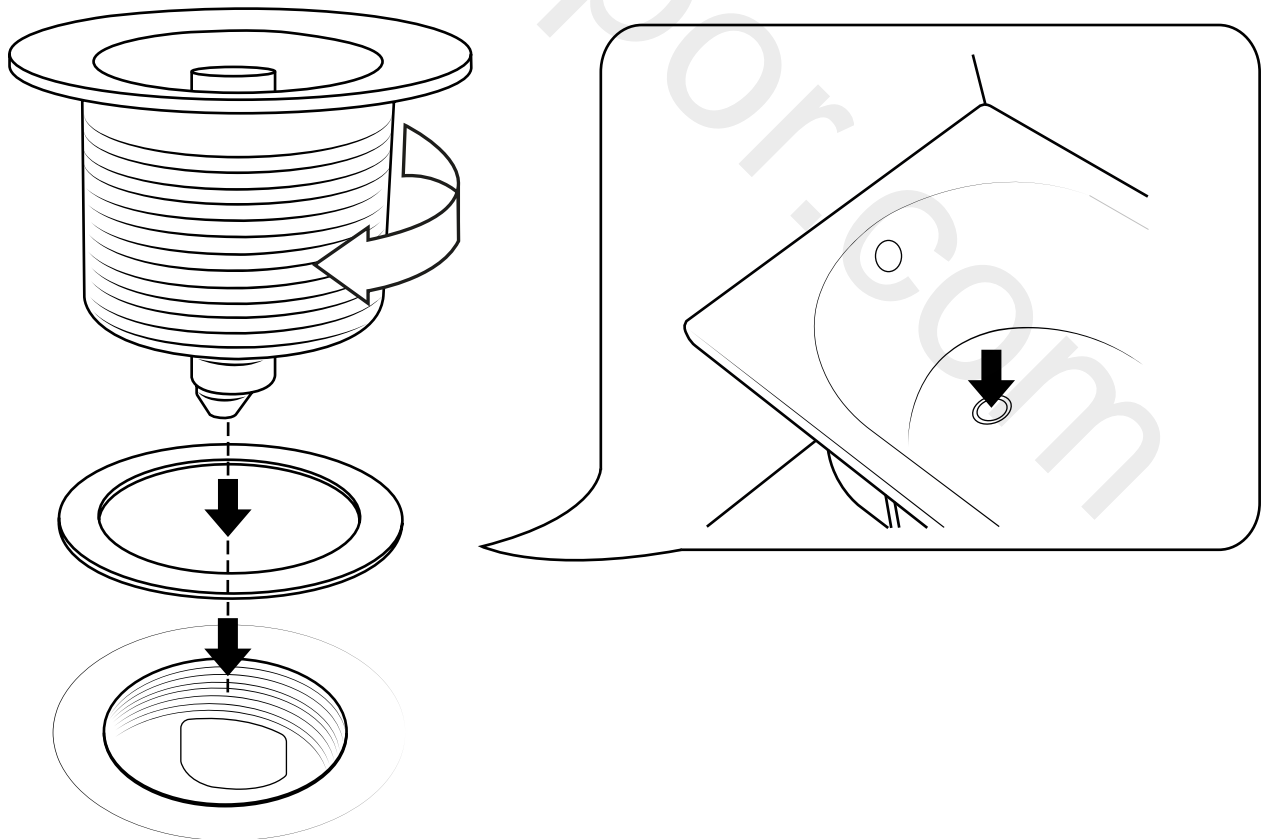


5

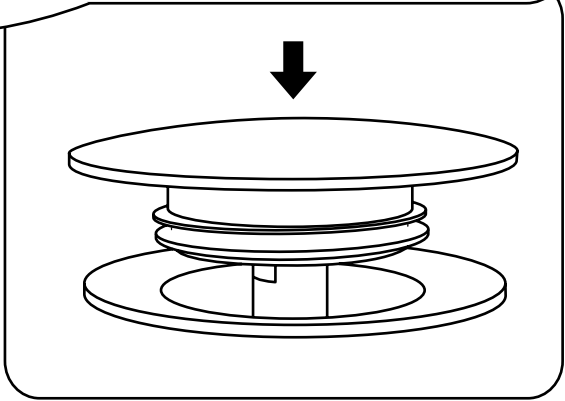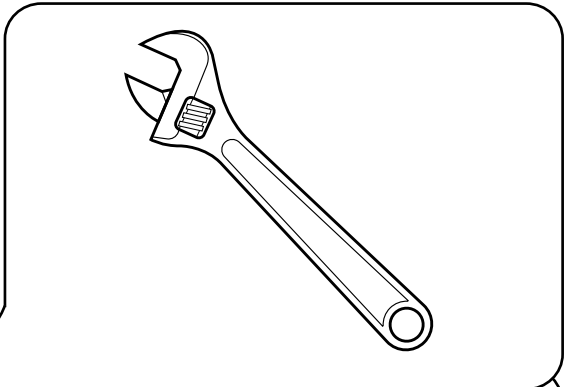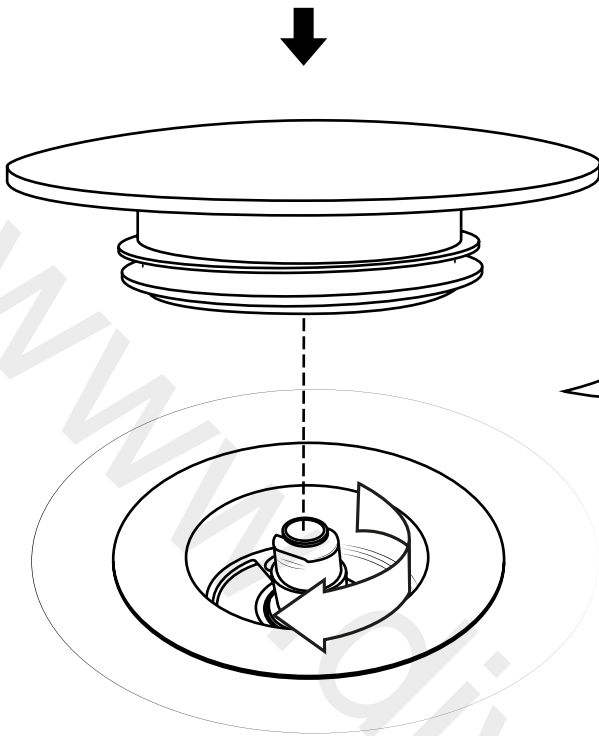


6

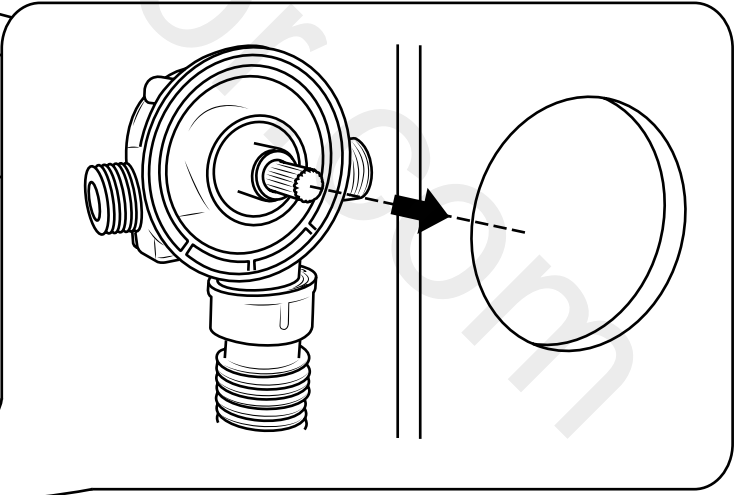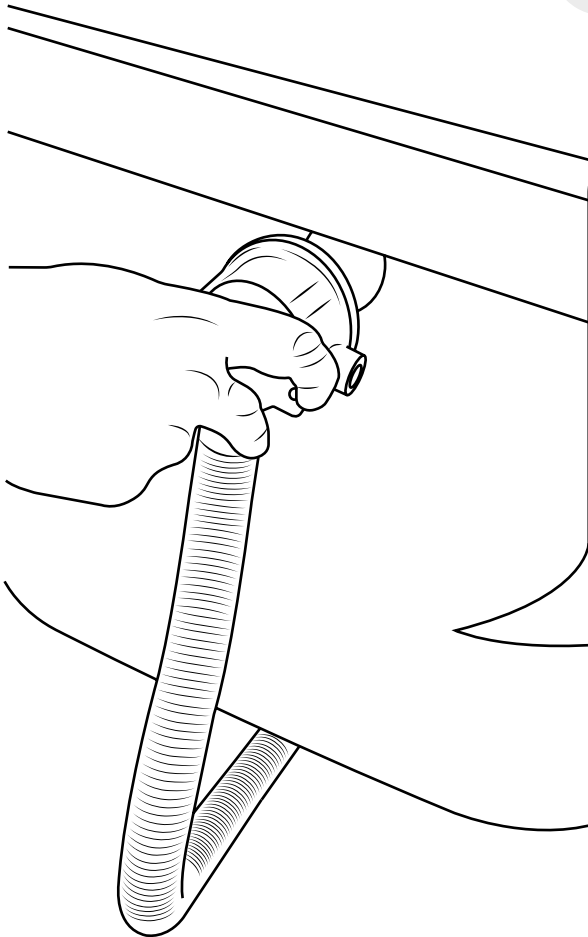


7

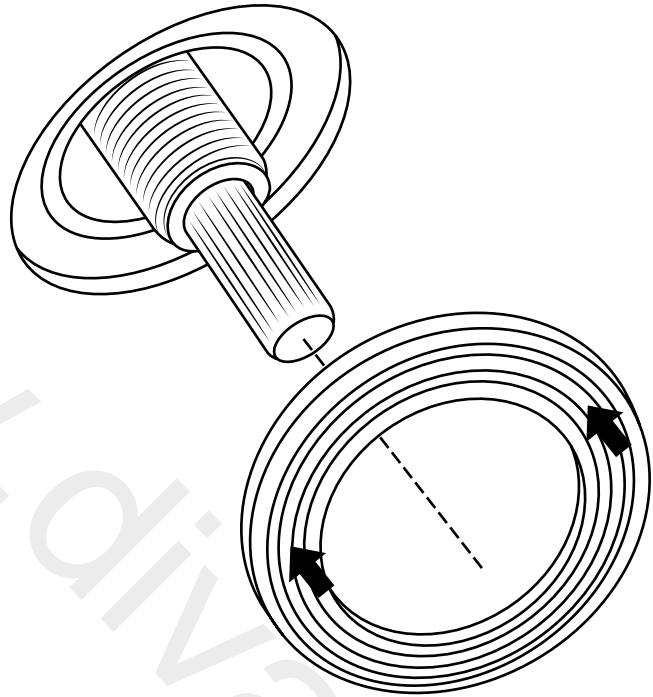


8

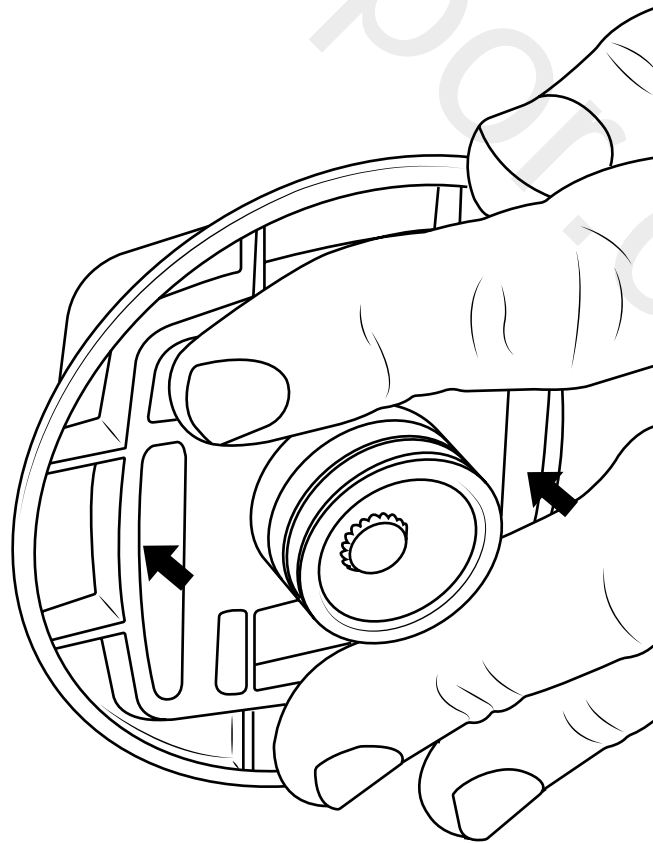

9

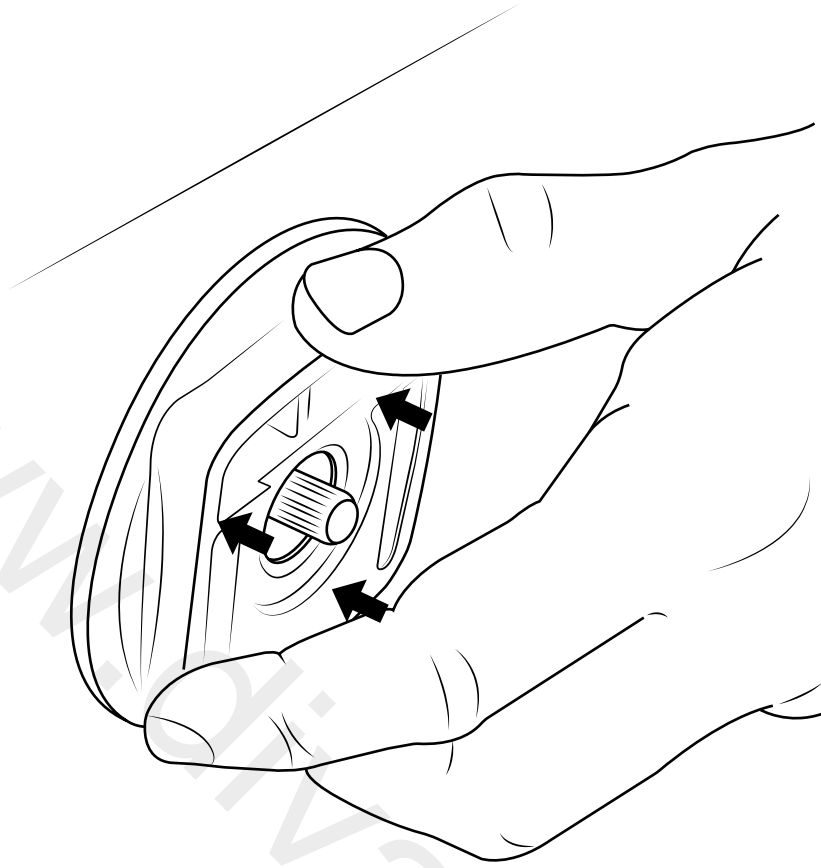


10

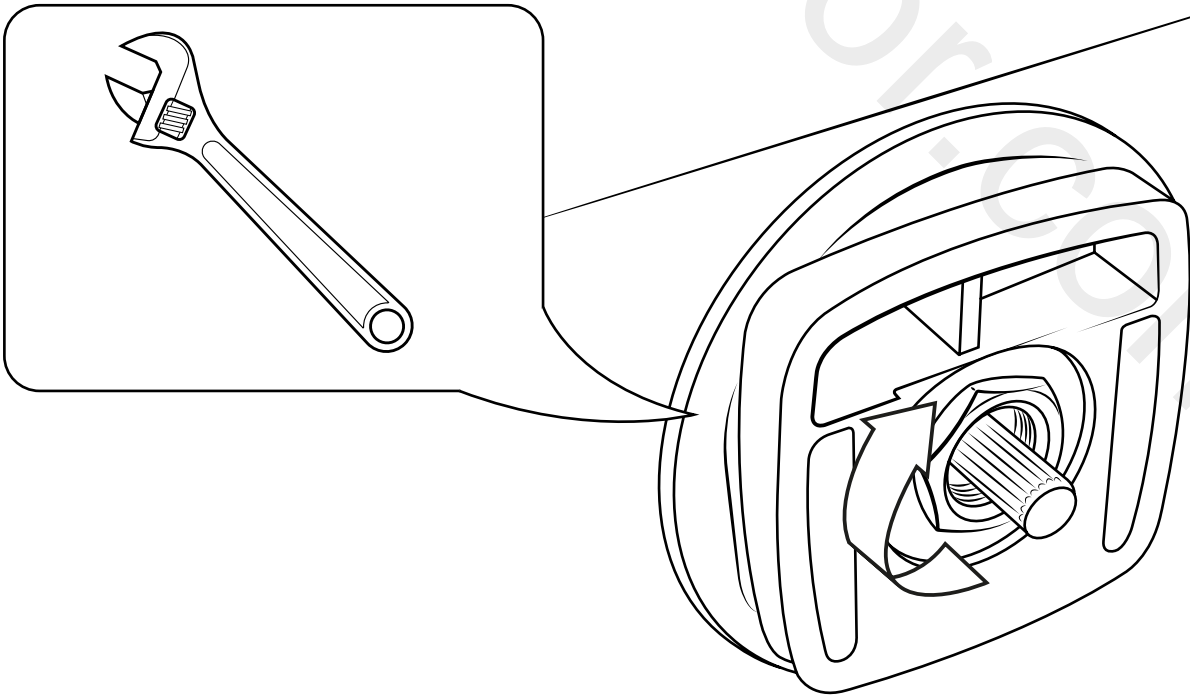


11

i Option 1

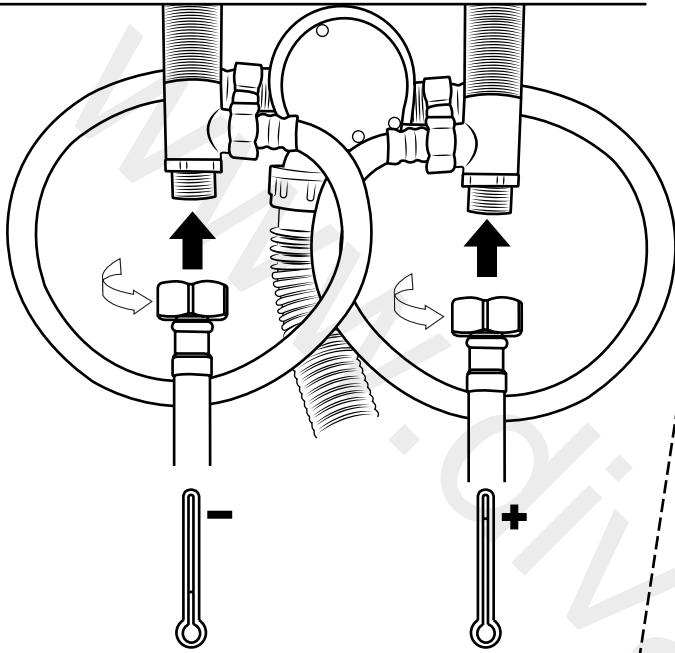


i Option 2

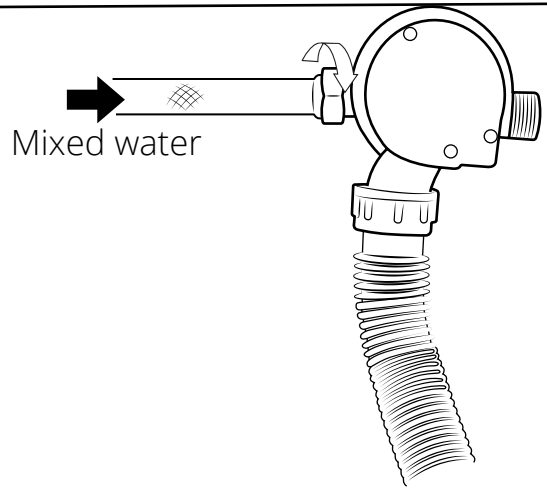


12


i Option 2 continued

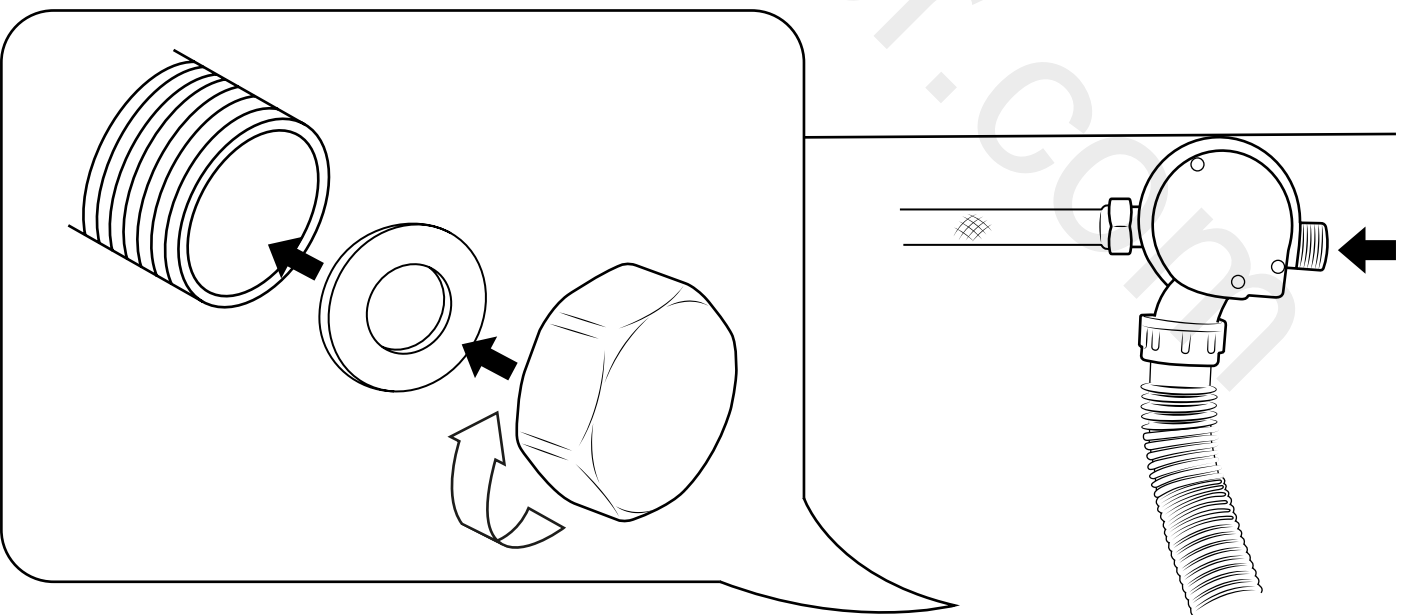


13

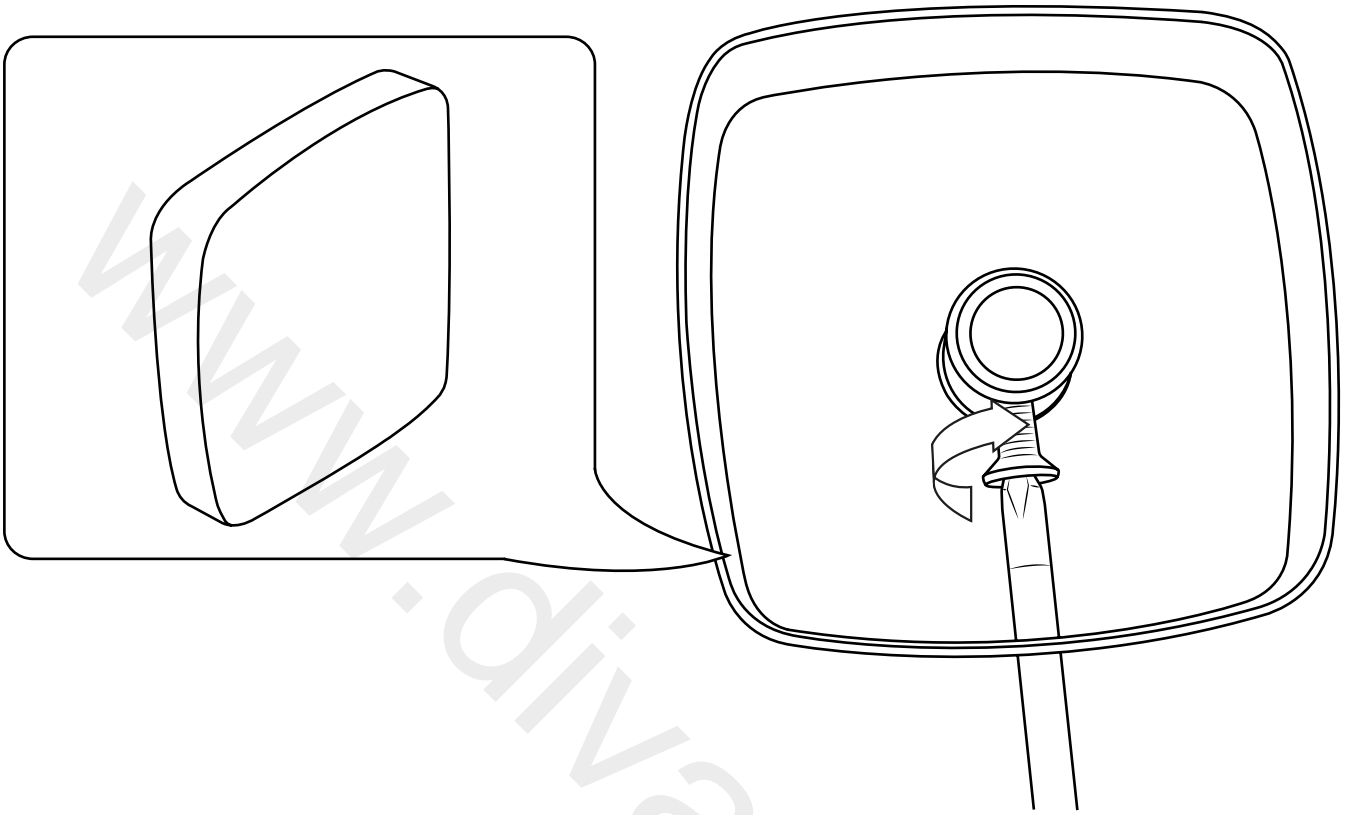

14

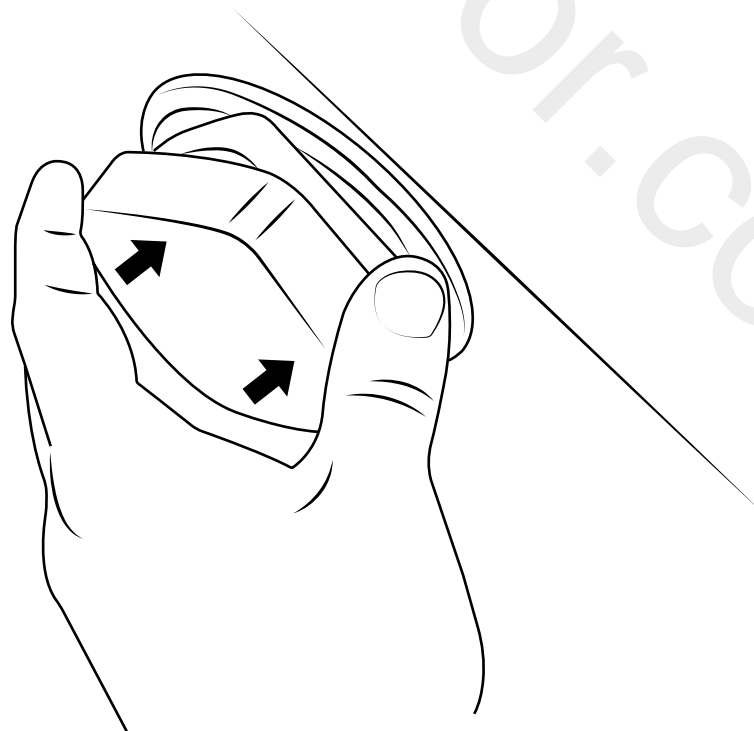

15

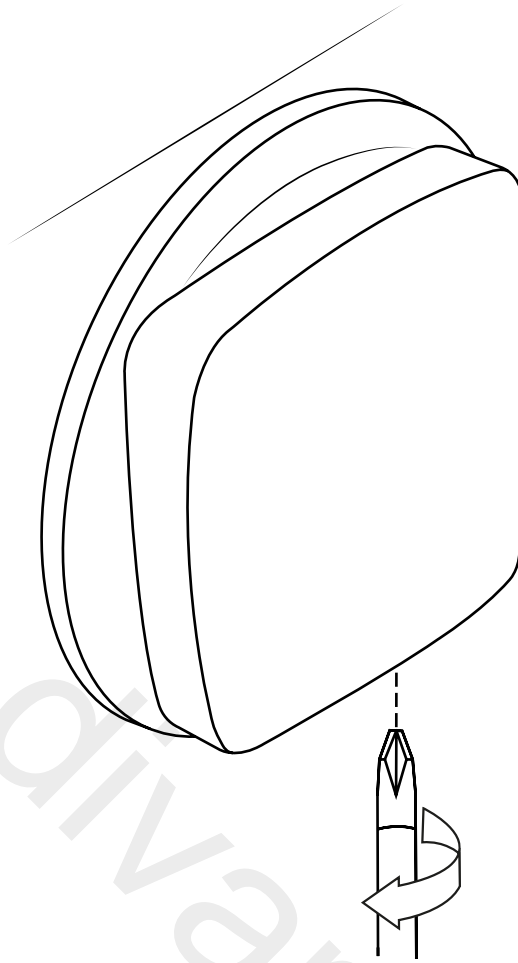

16

