


Milano







Traditional Twin Diverter Valve

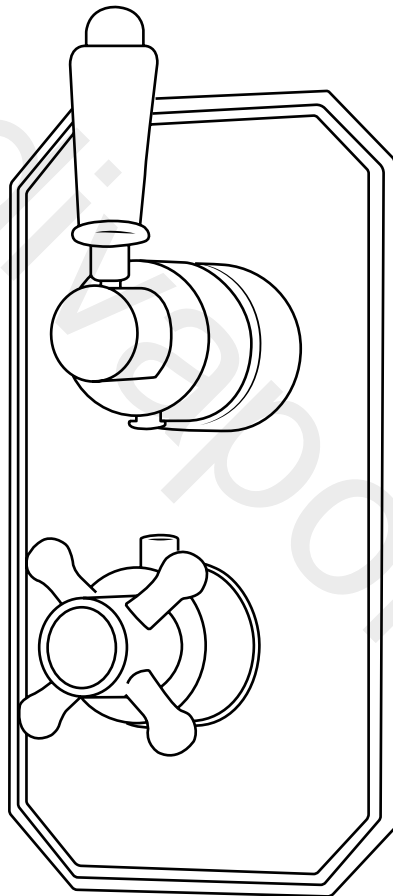









Installation Guide

Installation



Tools required for installing:

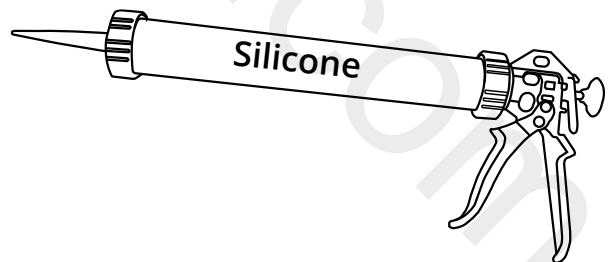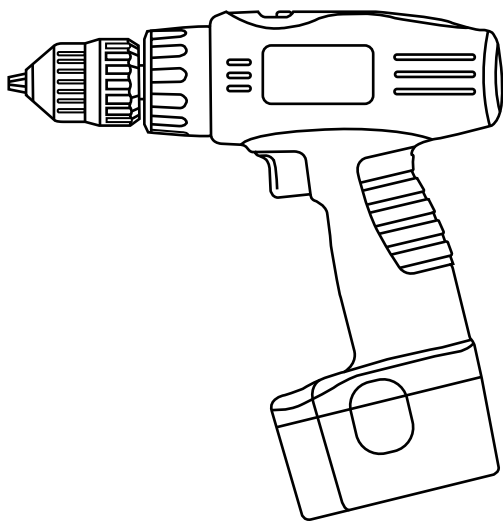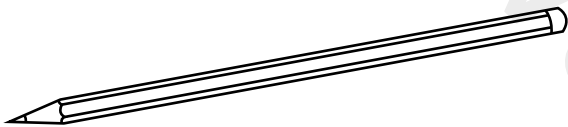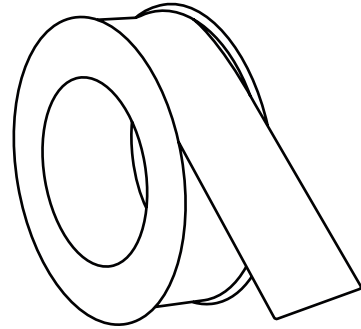


Parts included:

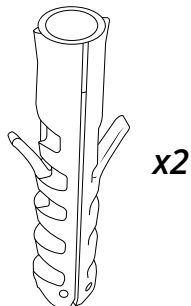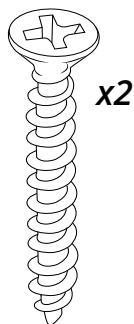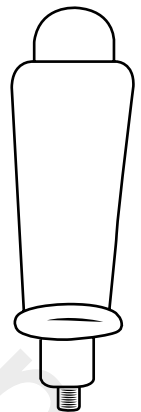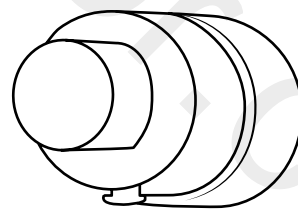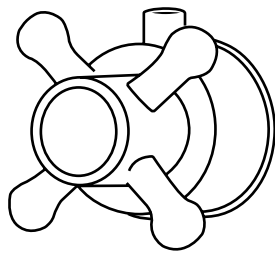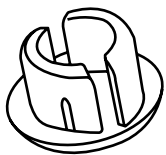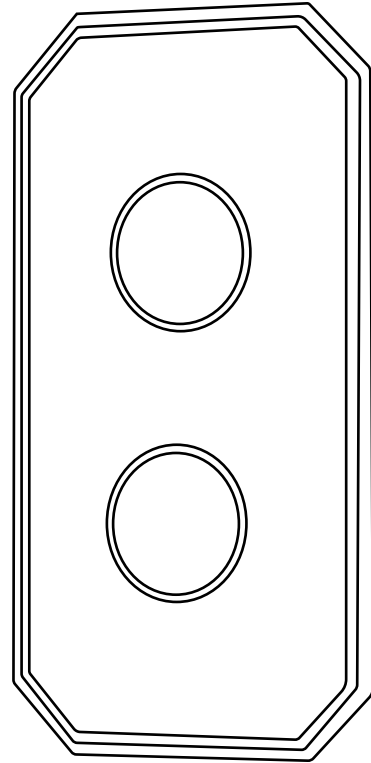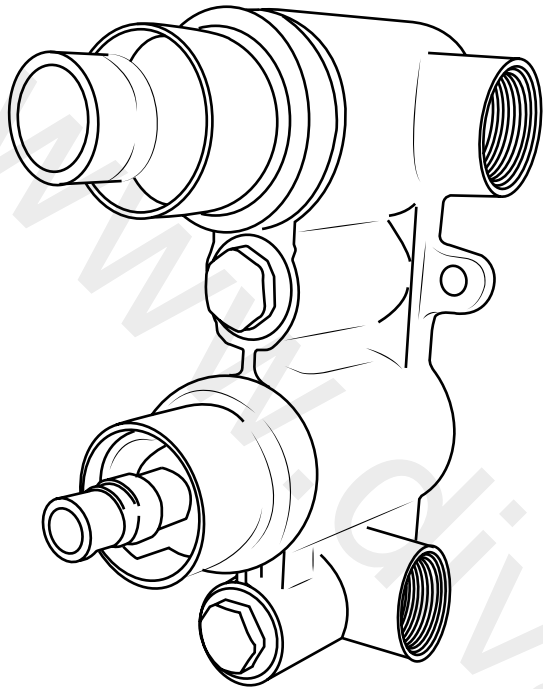


1

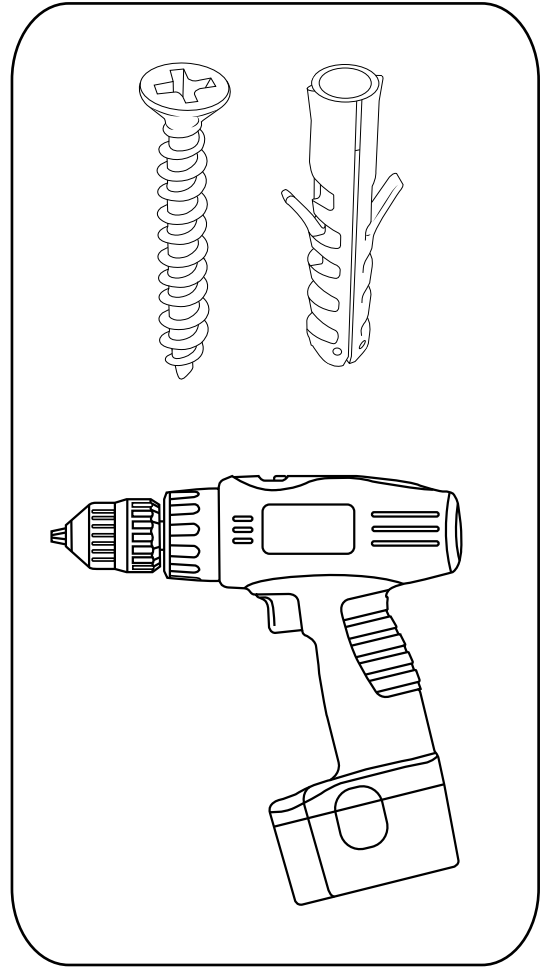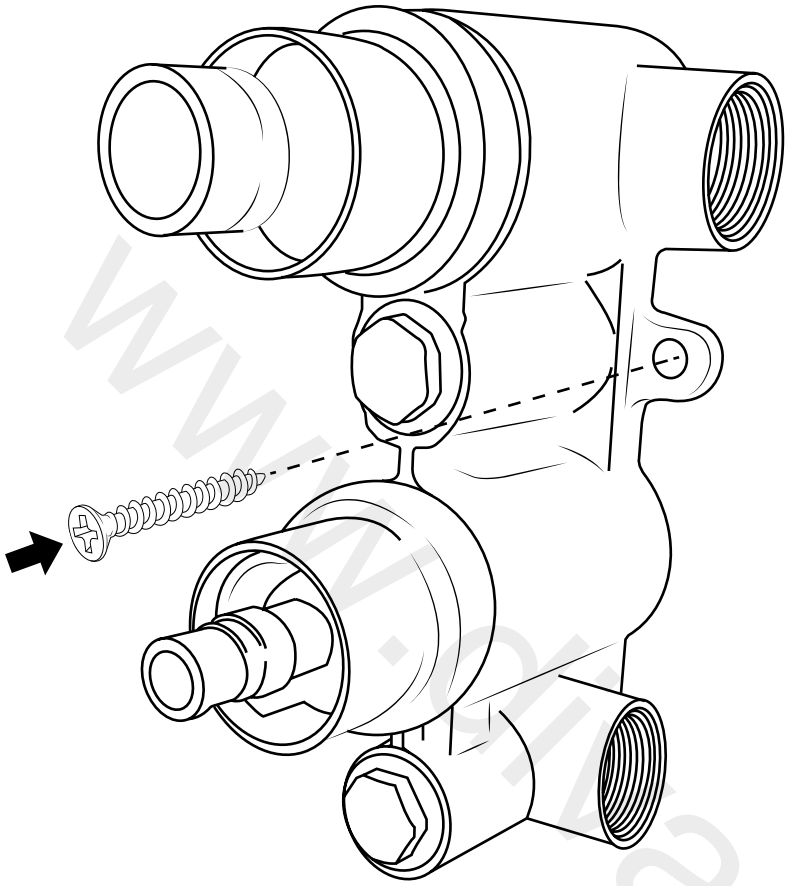


2

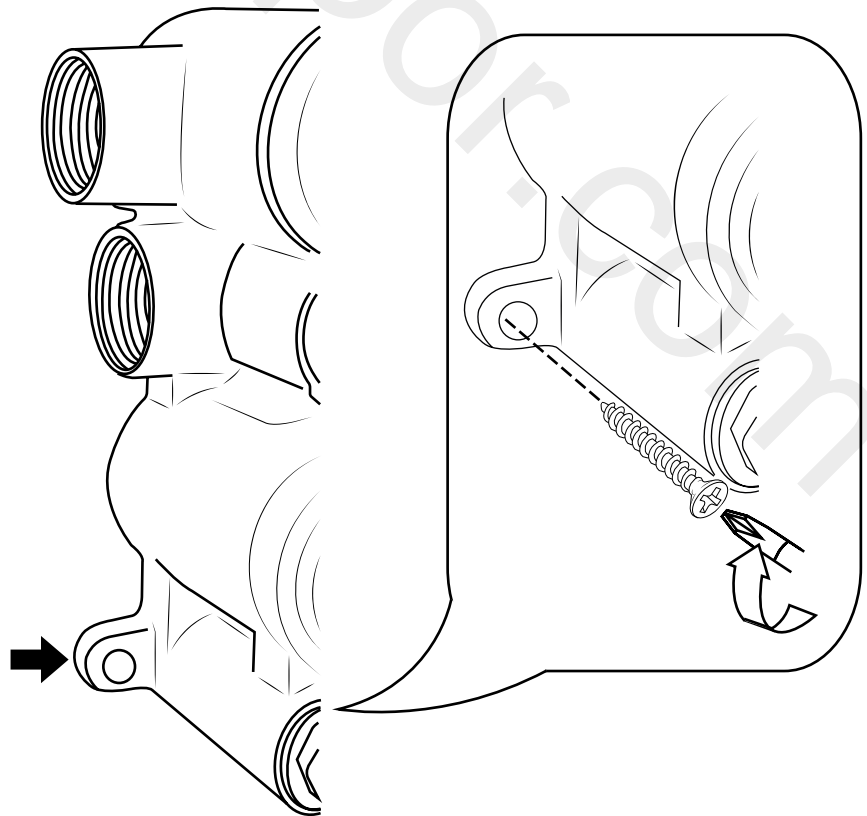


3

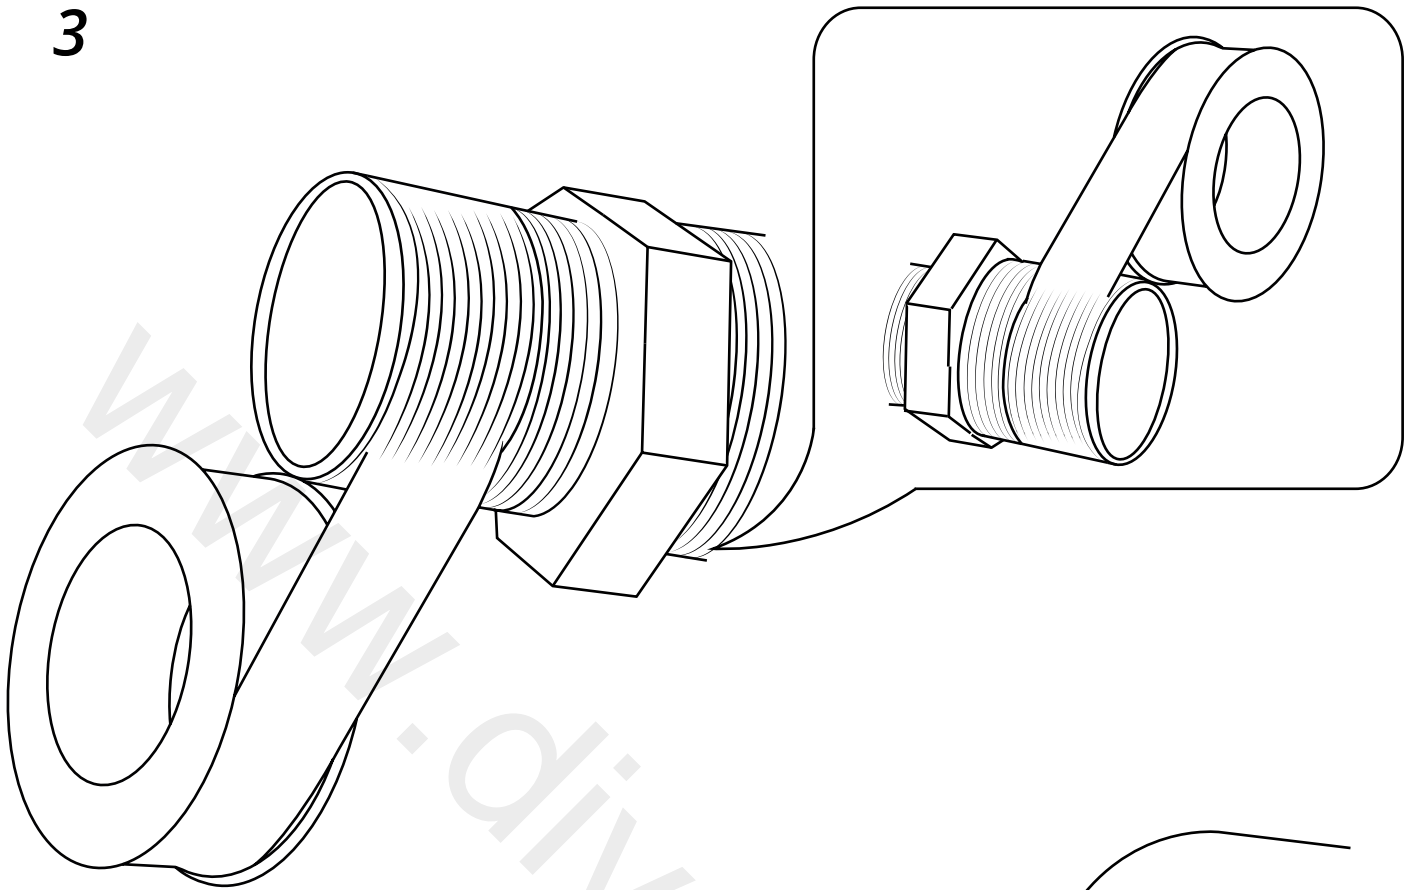


4

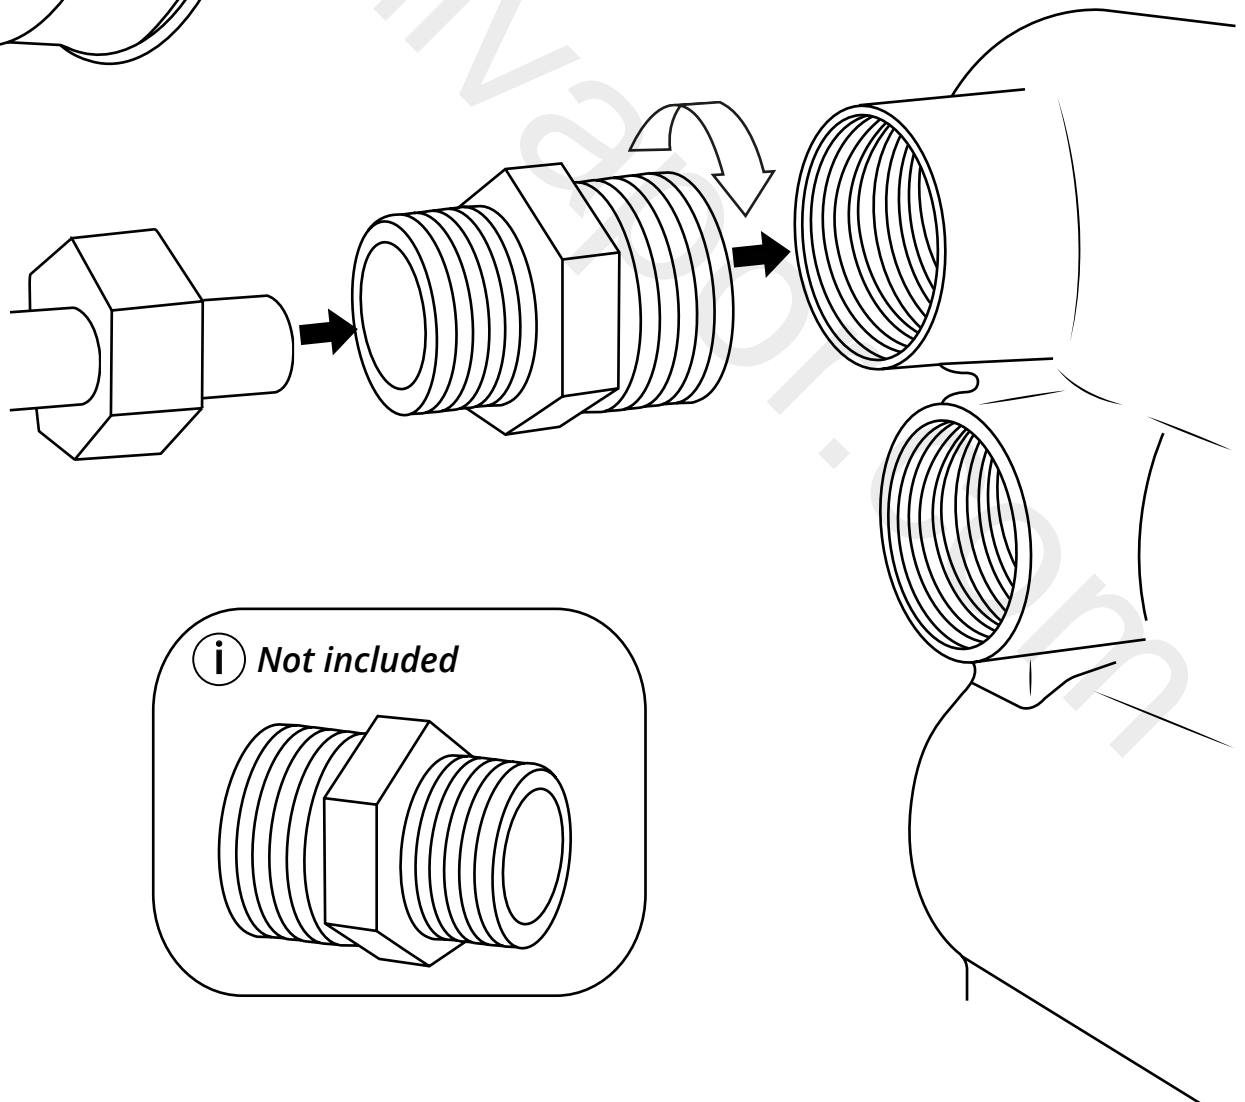


i Not included

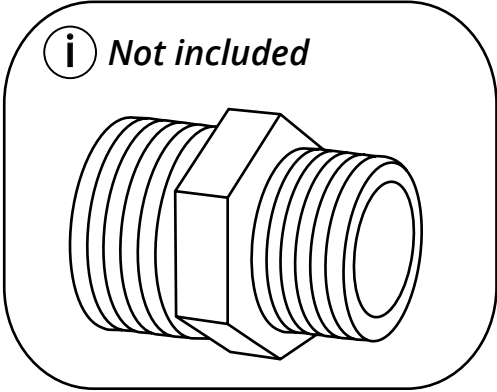


5

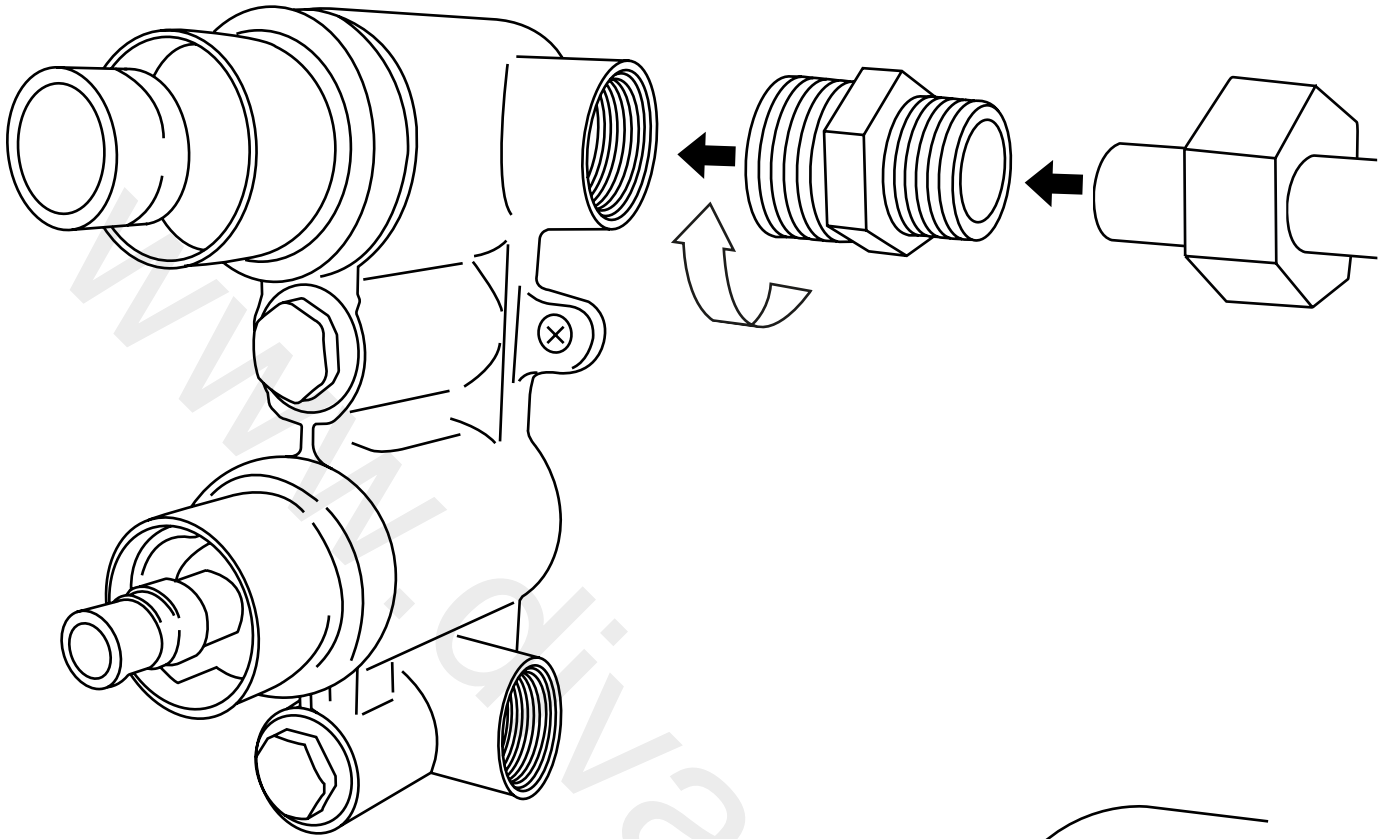


6

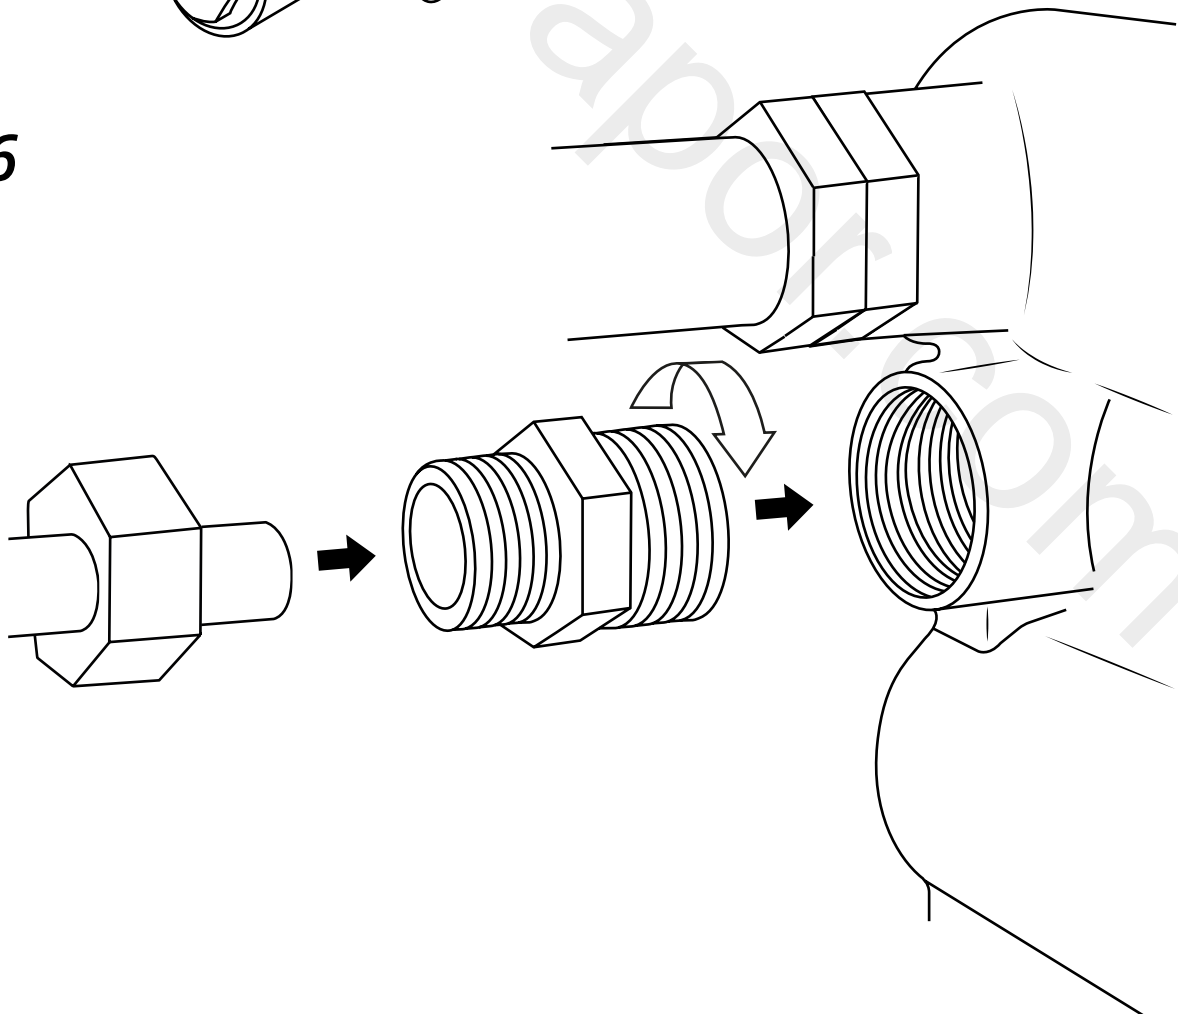


7

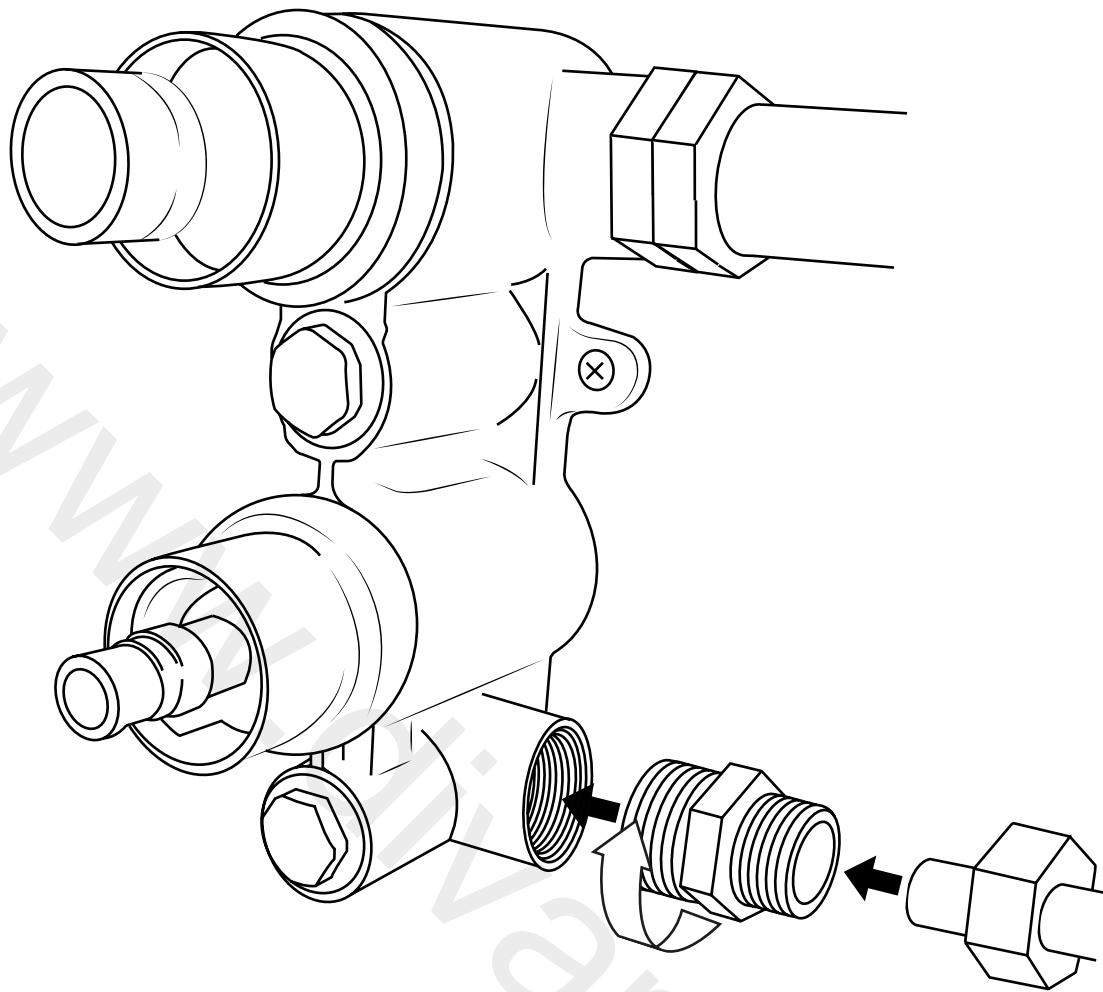


8

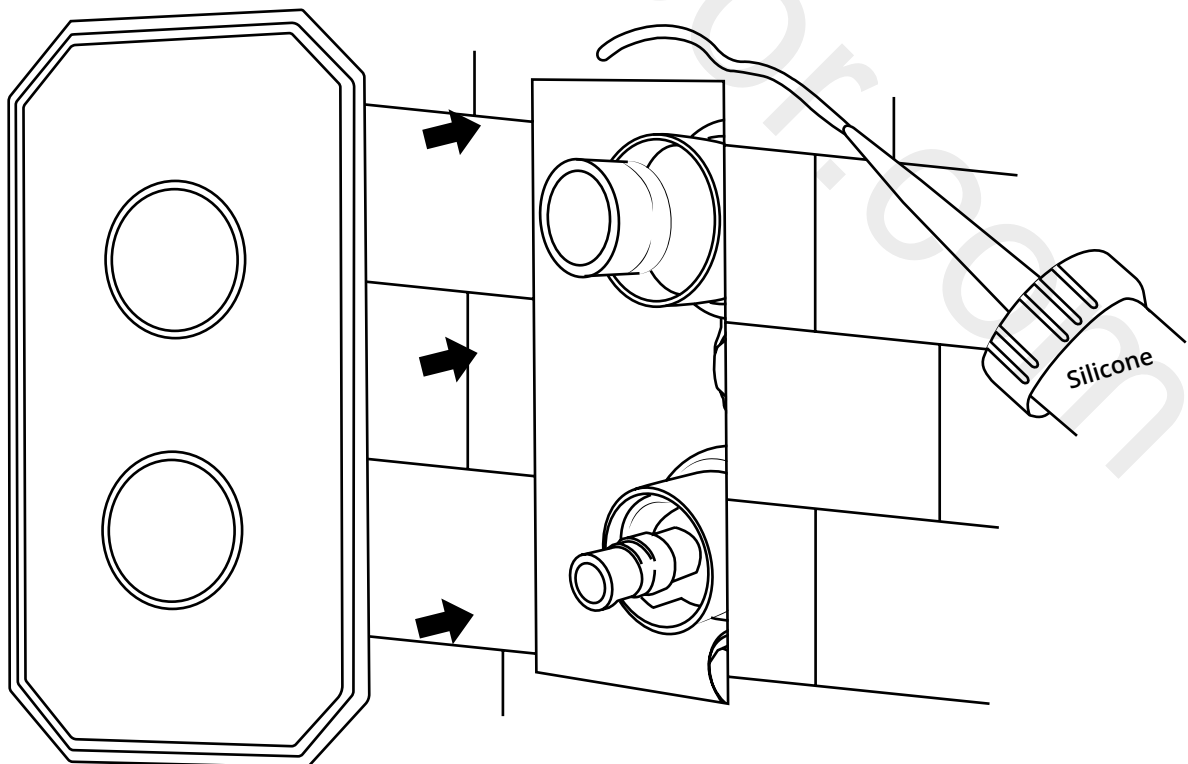


9

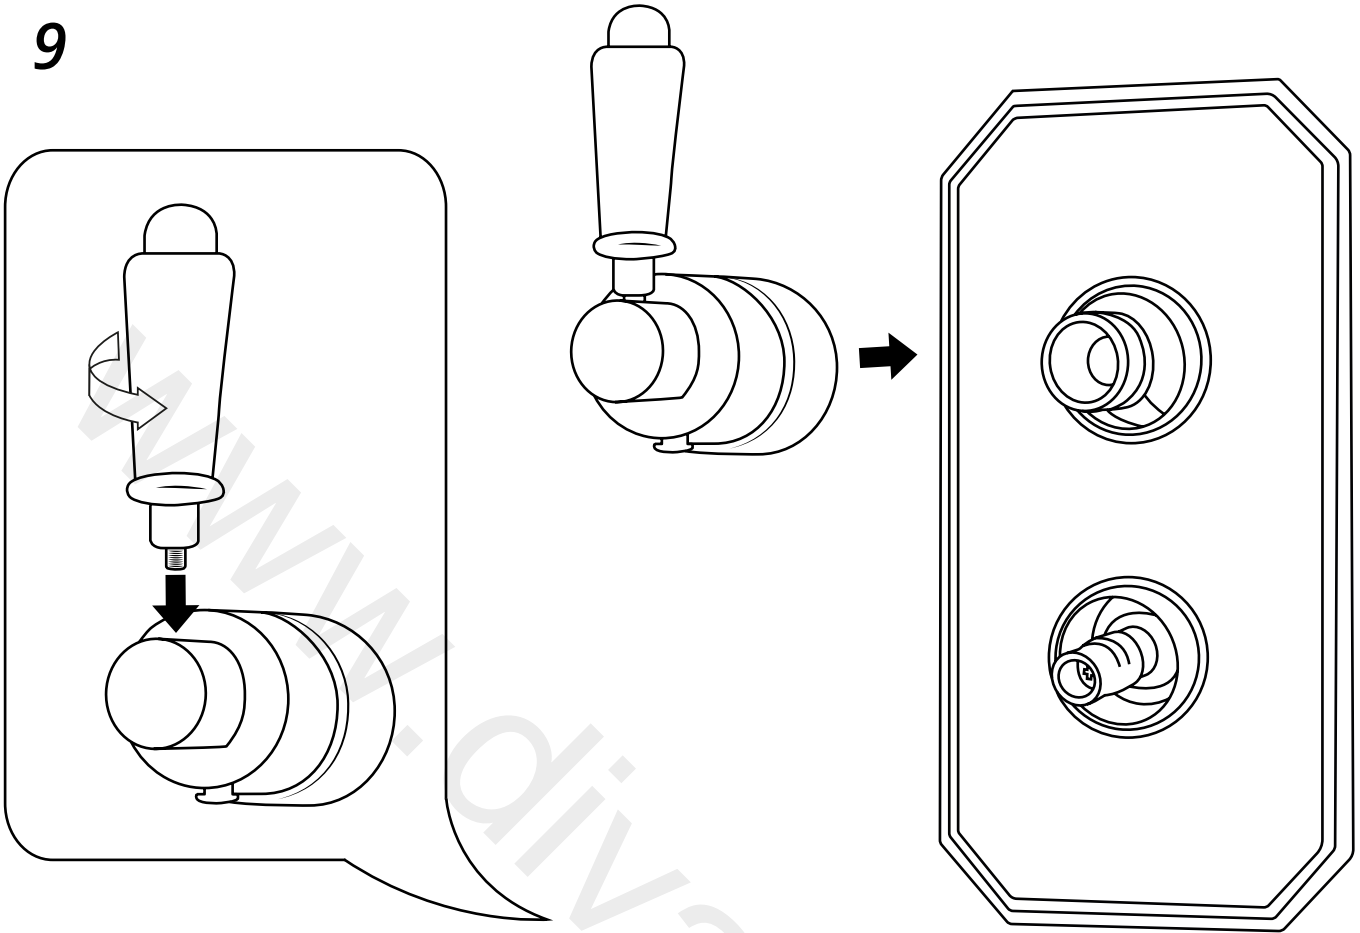


10

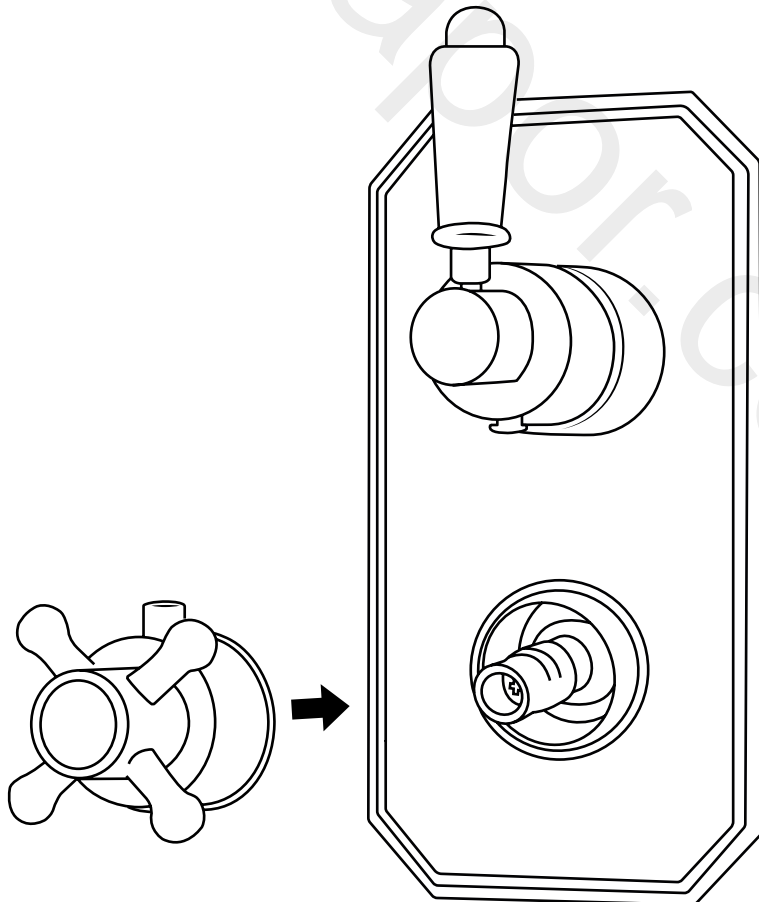


11

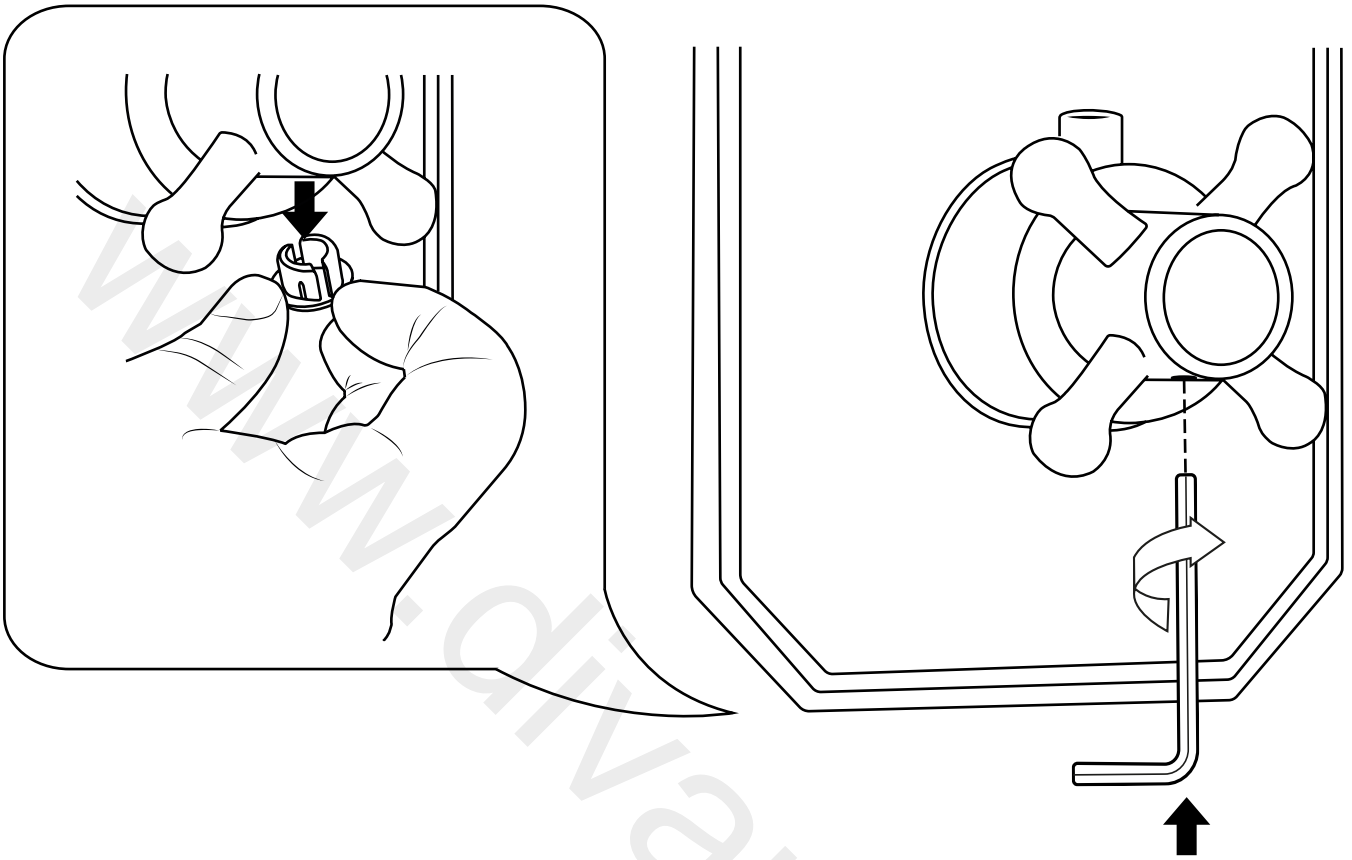

12

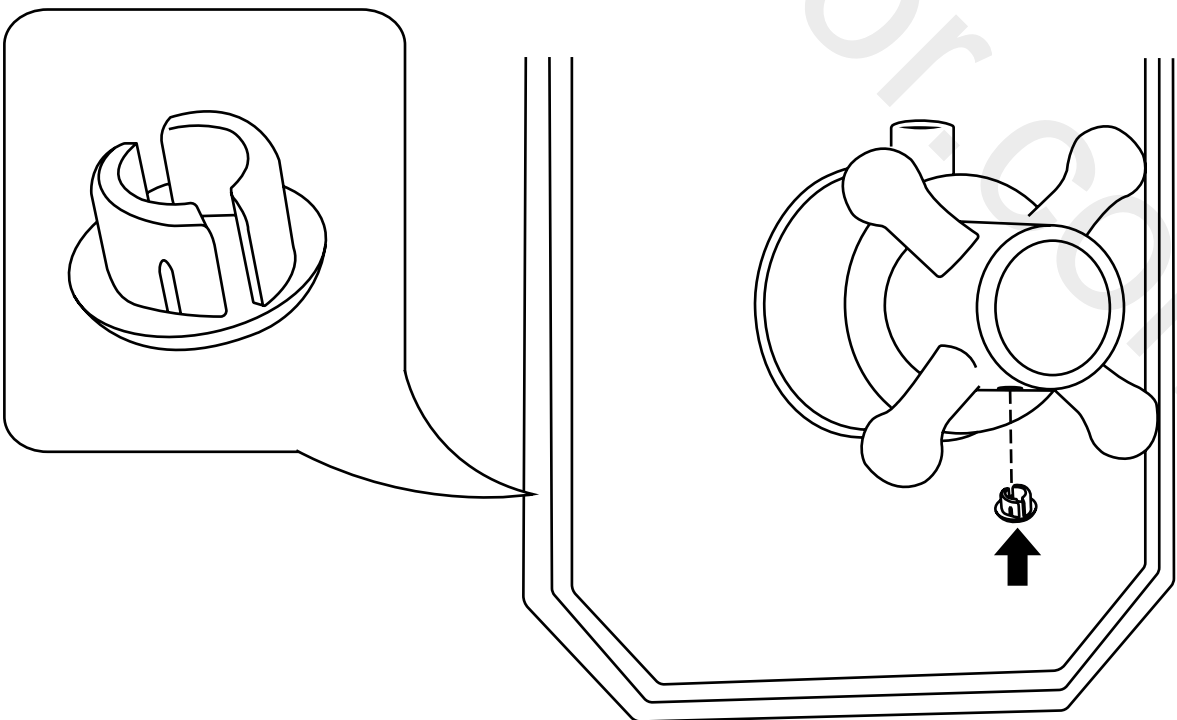

13

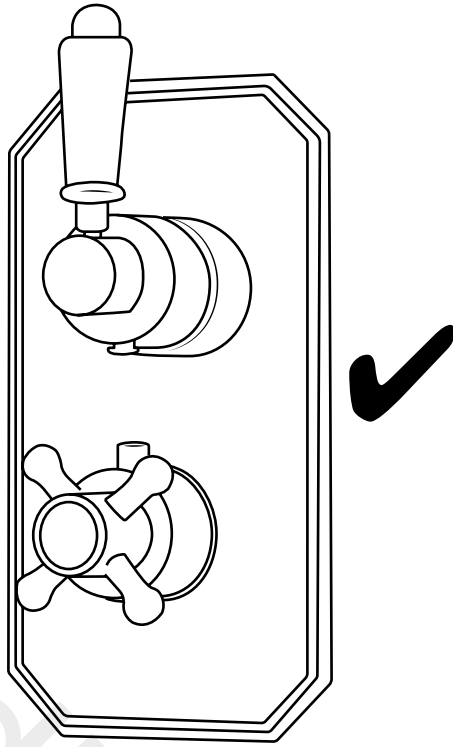

www.divapor.com

Installation Example

